


# **INSTALLATION AND OPERATION MANUAL**

## **For Naitec Mono ATW Heat Pump Unit**

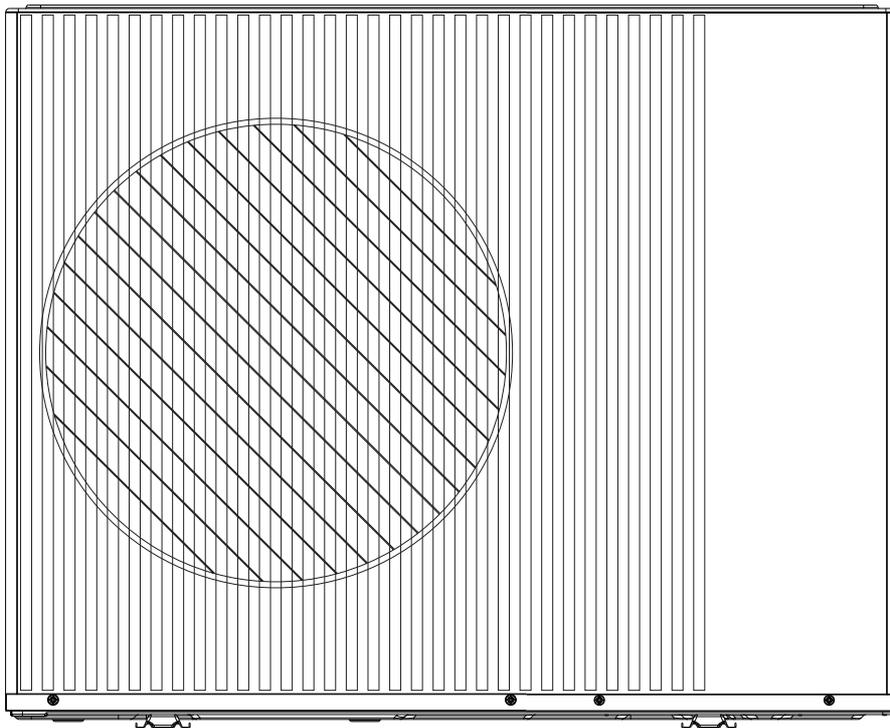

- For your convenience, please read this statement carefully, in accordance with the specification steps.
- Please safely keeping this manual to inspection.




# CONTENTS


---

1. SAFETY PRECAUTIONS .....	2
2. GENERAL INTRODUCTION .....	4
3. ACCESSORIES .....	5
4. PROTECTIVE ZONE .....	6
5. BEFORE INSTALLATION .....	8
6. IMPORTANT INFORMATION FOR THE REFRIGERANT .....	9
7. INSTALLATION SITE .....	9
8. INSTALLATION PRECAUTIONS .....	11
9. TYPICAL APPLICATIONS .....	13
10. OVERVIEW OF THE UNIT .....	19
11. START-UP AND CONFIGURATION .....	31
12. TEST RUN AND FINAL CHECKS .....	31
13. MAINTENANCE AND SERVICE .....	32
14. TROUBLE SHOOTING .....	33
15. TECHNICAL SPECIFICATIONS .....	37
16. MAINTENANCE NOTICE .....	38

**Note:** All the illustrations in this manual are for explanation purpose only. Your air conditioner may be slightly different. The actual shape shall prevail. They are subject to change without notice for future improvement.

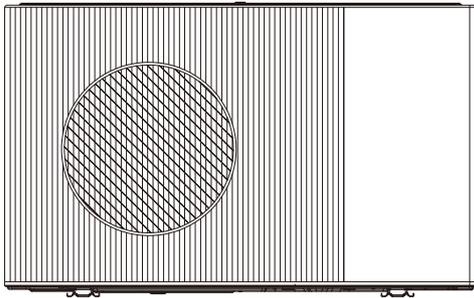


4/6kW

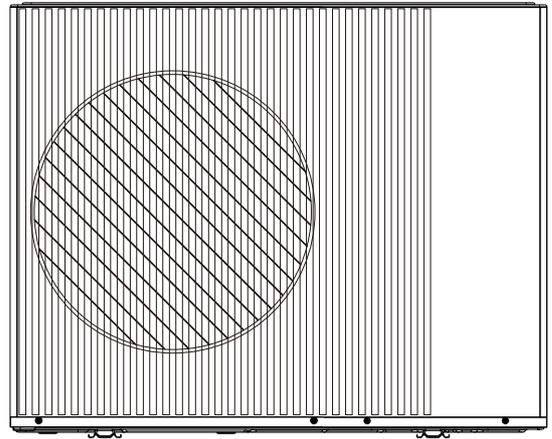

8/10/12/14/16kW

**Internal layout: 12~16kW(3-phase) for example**


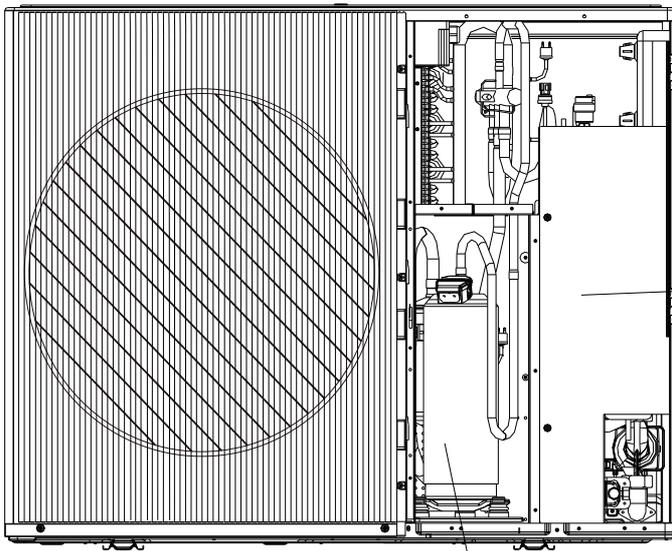


Refrigerant system

Hydraulic system

Electric control system

Terminal block

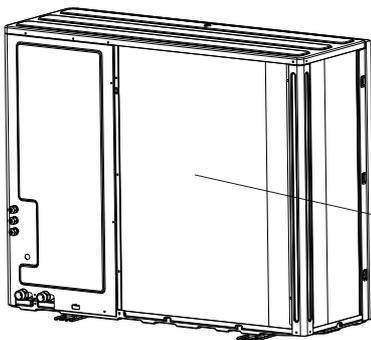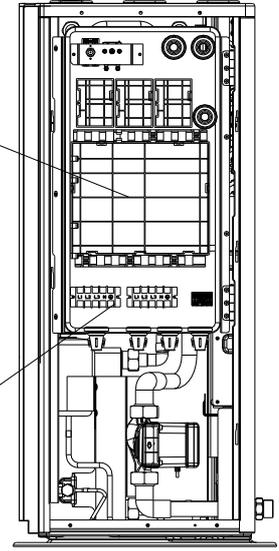

**Please remove hollow plate after installation**

**NOTE**

The picture and function described in this manual contain the backup heater components. Pictures in this manual are for reference only, please refer to the actual product.

Unit (kW)	1-phase						3-phase					
	4	6	8	10	12	14	16	8	10	12	14	16
Capacity of backup heater	3kW(1-phase)						9kW(3-phase)					
	Backup heater (optional)											

The standard unit without backup heater. Backup heater can be integrated in the unit for customized models(4~16kW).

# 1. SAFETY PRECAUTIONS

The precautions listed here are divided into the following types. They are quite important, so be sure to follow them carefully. Meanings of DANGER, WARNING, CAUTION and NOTE symbols

## INFORMATION

Read these instructions carefully before installation. Keep this manual in a handy for future reference. Improper installation of equipment or accessories may result in electric shock, short-circuit, leakage, fire or other damage to the equipment.

- Be sure to only use accessories made by the supplier, which are specifically designed for the equipment and make sure to get installation done by a professional.
- All the activities described in this manual must be carried out by a licensed technician. Be sure to wear adequate personal protection equipment such as gloves and safety glasses while installing the unit or carrying out maintenance activities, contact your dealer for any further assistance.
- Any activity that requires the unit to be opened must only be carried out by competent persons who have knowledge about the particular properties and risks of R290 refrigerant.
- Specific expert refrigeration knowledge in compliance with the local laws is required when carrying out work on the refrigerant circuit. This also includes specialist knowledge about handling flammable refrigerants, the corresponding tools and the required personal protective equipment.
- Comply with the corresponding local laws and regulations.
- Risk of death caused by fire or explosion if there is a leak in the refrigerant circuit.
- The product contains the combustible refrigerant R290. In the event of a leak, escaping refrigerant may mix with air to form a flammable atmosphere.
- There is a risk of fire and explosion. A protective zone is defined for the area close around the product. See section "Protective zone".
- Ensure that there are no ignition sources, such as plug sockets, light switches, lamps, electrical switches or other permanent ignitions sources, in the protective zone.
- Do not use any sprays or other combustible gases in the protective zone.
- If you are working on the product when it is open, before starting work, use a gas sniffer to ensure that there is no leak.
- The gas sniffer itself must not be an ignition source. The gas sniffer must be calibrated to R290 refrigerant and set to  $\leq 25\%$  of the lower explosive limit.
- Keep all ignition sources away from the protective zone. In particular, open flames, hot surfaces with temperatures above  $370^{\circ}\text{C}$ , electrical devices or tools that are not free from electrical sources, static discharges.
- Ensure that space is sufficiently aerated around the product.

 <b>R290</b>		<b>WARNING</b>	This symbol shows that this appliance used a flammable refrigerant. If the refrigerant is leaked and exposed to an external ignition source, there is a risk of fire.
		<b>CAUTION</b>	This symbol shows that the operation manual should be read carefully
		<b>CAUTION</b>	This symbol shows that a service personnel should be handling this equipment with reference to the installation manual.
		<b>CAUTION</b>	This symbol shows that information is available such as the operating manual or installation manual.
		<b>CAUTION</b>	This symbol shows that information is available such as the operating manual or installation manual.

## DANGER

- Before touching electric terminal parts, turn off power switch.
- When service panels are removed, live parts can be easily touched by accident.
- Never leave the unit unattended during installation or servicing when the service panel is removed.
- Do not touch water pipes during and immediately after operation as the pipes may be hot and could burn your hands. To avoid injury, give the piping time to return to normal temperature or be sure to wear protective gloves.
- Do not touch any switch with wet fingers. Touching a switch with wet fingers can cause electrical shock.
- Before touching electrical parts, turn off all applicable power to the unit.

## WARNING

- Tear apart and throw away plastic packaging bags so that children will not play with them. Children playing with plastic bags face danger of death by suffocation.
- Safely dispose of packing materials such as nails and other metal or wood parts that could cause injuries.
- Ask your dealer or qualified personnel to perform installation work in accordance with this manual. Do not install the unit yourself. Improper installation could result in water leakage, electric shocks or fire.
- Be sure to use only specified accessories and parts for installation work. Failure to use specified parts may result in water leakage, electric shocks, fire, or the unit falling from its mount.

## WARNING

- Install the unit on a foundation that can withstand its weight. Insufficient physical strength may cause the equipment to fall and possible injury.
- Perform specified installation work with full consideration of strong wind, hurricanes, or earthquakes. Improper installation work may result in accidents due to equipment falling.
- Make certain that all electrical work is carried out by qualified personnel according to the local laws and regulations and this manual using a separate circuit. Insufficient capacity of the power supply circuit or improper electrical construction may lead to electric shocks or fire.
- Be sure to install a ground fault circuit interrupter according to local laws and regulations. Failure to install a ground fault circuit interrupter may cause electric shocks and fire.
- Make sure all wiring is secure. Use the specified wires and ensure that terminal connections or wires are protected from water and other adverse external forces. Incomplete connection or affixing may cause a fire.
- When wiring the power supply, form the wires so that the front panel can be securely fastened. If the front panel is not in place there could be overheating of the terminals, electric shocks or fire.
- After completing the installation work, check to make sure that there is no refrigerant leakage.
- Never directly touch any leaking refrigerant as it could cause severe frostbite. Do not touch the refrigerant pipes during and immediately after operation as the refrigerant pipes may be hot or cold, depending on the condition of the refrigerant flowing through the refrigerant piping, compressor and other refrigerant cycle parts. Burns or frostbite are possible if you touch the refrigerant pipes. To avoid injury, give the pipes time to return to normal temperature or, if you must touch them, be sure to wear protective gloves.
- Do not touch the internal parts (pump, backup heater, etc.) during and immediately after operation. Touching the internal parts can cause burns. To avoid injury, give the internal parts time to return to normal temperature or, if you must touch them, be sure to wear protective gloves.

## CAUTION

- Ground the unit.
- Grounding resistance should be according to local laws and regulations.
- Do not connect the ground wire to gas or water pipes, lightning conductors or telephone ground wires.
- Incomplete grounding may cause electric shocks.
  - Gas pipes: Fire or an explosion might occur if the gas leaks.
  - Water pipes: Hard vinyl tubes are not effective grounds.
  - Lightning conductors or telephone ground wires: Electrical threshold may rise abnormally if struck by a lightning bolt.
- Install the power wire at least 3 feet (1 meter) away from televisions or radios to prevent interference or noise. (Depending on the radio waves, a distance of 3 feet (1 meter) may not be sufficient to eliminate the noise.)
- Do not wash the unit. This may cause electric shocks or fire. The appliance must be installed in accordance with national wiring regulations. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not install the unit in the following places:
  - Where there is mist of mineral oil, oil spray or vapors. Plastic parts may deteriorate, and cause them to come loose or water to leak.
  - Where corrosive gases (such as sulphurous acid gas) are produced. Where corrosion of copper pipes or soldered parts may cause refrigerant to leak.
  - Where there is machinery which emits electromagnetic waves. Electromagnetic waves can disturb the control system and cause equipment malfunction.
  - Where flammable gases may leak, where carbon fiber or ignitable dust is suspended in the air or where volatile flammables such as paint thinner or gasoline are handled. These types of gases might cause a fire.
  - Where the air contains high levels of salt such as near the ocean.
  - Where voltage fluctuates a lot, such as in factories.
  - In vehicles or vessels.
  - Where acidic or alkaline vapors are present.
- This appliance can be used by children 8 years old and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they are supervised or given instruction on using the unit in a safe manner and understand the hazards involved. Children should not play with the unit. Cleaning and user maintenance should not be done by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.  
If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person.
- **DISPOSAL:** Do not dispose this product as unsorted municipal waste. Collection of such waste separately for special treatment is necessary. Do not dispose of electrical appliances as municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substance can leak into the groundwater and get into the food chain, damaging your health and well-being.
- The wiring must be performed by professional technicians in accordance with national wiring regulation and this circuit diagram. An all-pole disconnection device which has at least 3mm separation distance in all pole and a residual current device(RCD) with the rating not exceeding 30mA shall be incorporated in the fixed wiring according to the national rule.
- Confirm the safety of the installation area (walls, floors, etc.) without hidden dangers such as water, electricity, and gas, before wiring/pipes.
- Before installation, check whether the user's power supply meets the electrical installation requirements of unit ( including reliable grounding, leakage, and wire diameter electrical load, etc.). If the electrical installation requirements of the product are not met, the installation of the product is prohibited until the product is rectified.
- When installing multiple air conditioners in a centralized manner, please confirm the load balance of the three-phase power supply, and multiple units are prevented from being assembled into the same phase of the three-phase power supply.
- Product installation should be fixed firmly. Take reinforcement measures, when necessary.

## NOTE

### About Fluorinated Gasses


- This air-conditioning unit contains fluorinated gasses. For specific information on the type of gas and the amount, please refer to the relevant label on the unit itself. Compliance with national gas regulations shall be observed.
- Installation, service, maintenance and repair of this unit must be performed by a certified technician.
- Product uninstallation and recycling must be performed by a certified technician.
- If the system has a leak-detection system installed, it must be checked for leaks at least every 12 months. When the unit is checked for leaks, proper record-keeping of all checks is strongly recommended

## 2. GENERAL INTRODUCTION

- These units are used for both heating and cooling applications and domestic hot water tanks. They can be combined with fan coil units, floor heating applications, low temperature high efficiency radiators, domestic hot water tanks and solar kits, which are all field supplied.
- A wired controller is supplied with the unit.
- If you choose the built-in backup heater unit, the backup heater can increase the heating capacity during cold outdoor temperature. The backup heater also serves as a backup in case of malfunctioning and for frozen protection of the outside water piping during winter time.

## NOTE

- Maximum length of communication wirings between the indoor unit and the controller is 50m.
- Power cords and communication wiring must be laid out separately, they can not be placed in the same conduit. Otherwise, it may lead to electromagnetic interference. Power cords and communication wirings should not come in contact with the refrigerant pipe so as to prevent the high temperature pipe from damaging wirings.
- Communication wirings must use shielded lines.

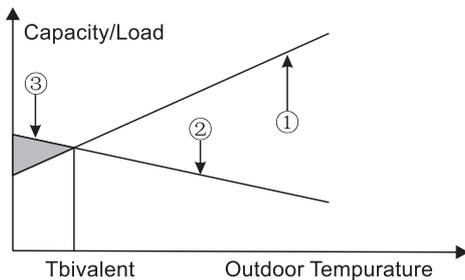


- ① Heat pump capacity.
- ② Required heating capacity (site dependent).
- ③ Additional heating capacity provided by backup heater

### Domestic hot water tank (field supply)

A domestic hot water tank (with or without booster heater) can be connected to the unit.

The requirement of the tank is different for different unit and material of heat exchanger.

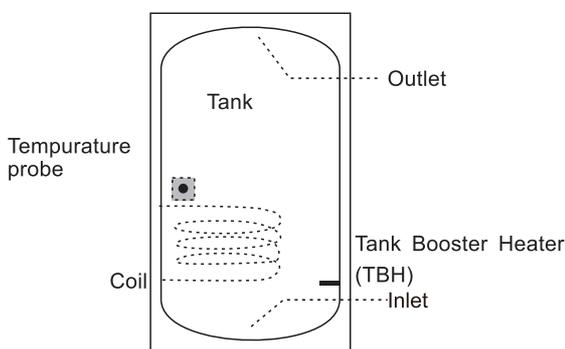

The booster heater should be installed below the temperature probe. The heat exchanger (coil) should be installed below the temperature probe.

The pipe length between the outdoor unit and tank should be less than 5 meters.

Monobloc unit		4~6kW	8~10kW	12~16kW
Volume of tank/L	Recommended	100~250	150~300	200~500
Heat exchange area/m <sup>2</sup> (Stainless steel coil)	Minimum	1.4	1.4	1.6
Heat exchange area/m <sup>2</sup> (Enamel coil)	Minimum	2.0	2.0	2.5

### Room thermostat (field supplied)

Room thermostat can be connected to the unit (room thermostat should be kept away from heating source when selecting the installation place).

### Solar kit for domestic hot water tank (field supplied)

An optional solar kit can be connected to the unit.

### Operation range


Outlet water (Heating mode)	+25 ~ +80°C	
Outlet water (Cooling mode)	+5 ~ +25°C	
Domestic hot water	+30 ~ +75°C	
Ambient temperature	-25 ~ +43°C	
Water pressure	0.1~0.3 MPa	
Water flow	4kW	0.40~1.25m <sup>3</sup> h
	6kW	0.40~1.25m <sup>3</sup> h
	8kW	0.70~3.00m <sup>3</sup> h
	10kW	0.70~3.00m <sup>3</sup> h
	12kW	0.70~3.00m <sup>3</sup> h
	14kW	0.70~3.00m <sup>3</sup> h
16kW	0.70~3.00m <sup>3</sup> h	

The unit have a freeze prevention function that uses the heat pump or backup heater (Customized model) to keep the water system safe from freezing in all conditions.

Since a power failure may happen when the unit is unattended, It's suggested to use anti-freezing flow switch in the water system. (Refer to 10.4"Water piping")


### 3. ACCESSORIES

In cooling mode, the water flowing temperature (TW02) range in different outdoor temperature(Tao) is listed below:

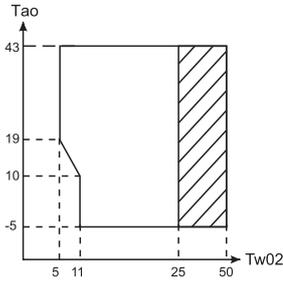


 Operation range by heat pump with possible limitation and protection.

In heating mode, the water flowing temperature (Tw02) range in different outdoor temperature (Tao)) is listed below:

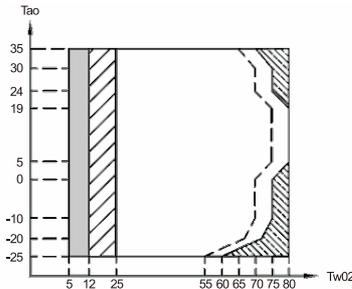

 If IBH/ANS setting is valid, only iBh/as turns on;  
 If IBH/ANS setting is invalid, only heat pump turns on;  
 limitation and protection may occur during heat pump operation.  
 Operation range by heat pump with possible limitation and protection.  
 Heat pump turns off, only IBH/ANS turns on.  
 Maximum inlet water temperature line for heat pump operation.

In DHW mode, the water flowing temperature(TW02) range in different outdoor temperature(Tao) is listed below:

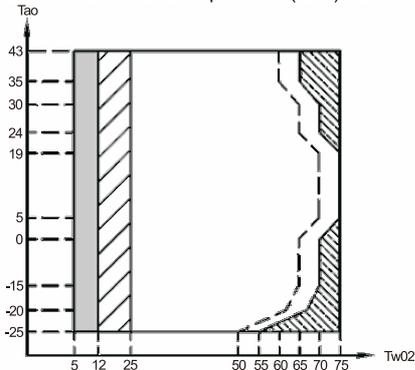

 If IBH/ANS setting is valid, only iBh/as turns on;  
 If IBH/ANS setting is invalid, only heat pump turns on;  
 limitation and protection may occur during heat pump operation.  
 Operation range by heat pump with possible limitation and protection.  
 Heat pump turns off, only IBH/ANS turns on.  
 Maximum inlet water temperature line for heat pump operation.

#### 3.1 Accessories supplied with the unit

Installation Fittings		
Name	Shape	Quantity
Installation and owner's manual(this book)		1
Operation manual		1
Technical data manual		1
Y-shape filter		1
Wired controller		1
Thermistor for domestic hot water tank (Twt)		1
Drian hose		1
Energy label		1
Rubber water plug		1
Wire controller communication wire		1
Wire controller communication adapter		1

#### 3.2 Accessories available from supplier

Thermistor for balance tank (Twt_BT1)		1
Extension wire for Twt_BT1		1
Thermistor for balance tank (Twt_BT2)		1
Extension wire for Twt_BT2		1
Thermistor for Zone 2 flow temp. (Twi_FLH)		1
Extension wire for Twi_FLH		1
Thermistor for solar temp. (Tsolar)		1
Extension wire for Tsolar		1
Thermistor for Zone 1 room temp. (Tai)		1
Extension wire for Tai		1
Thermistor for Zone 2 room temp. (Tai_FLH)		1
Extension wire for Tai_FLH		1


Thermistor and extension wire for Twt-BT, Twi-FLH, Tsolar can be shared, if these functions are needed at the same time, and 10m in length of the sensor cable please order these thermistors and extension wire additionally. (TH1, TH2 are reserved port)

## 4. PROTECTIVE ZONE

### 4.1 Protective zone

- The product contains R290 refrigerant. Note that this refrigerant has a higher density than air. In the event of a leak, escaping refrigerant may collect near the ground.
- The refrigerant must not collect in any way that may lead to a dangerous, explosive, suffocating or toxic atmosphere.
- The refrigerant must not get inside the building via building openings. The refrigerant must not collect in grooves.
- A protective zone is defined around the product. There must be no windows, doors, light shafts, cellar entrances, escape hatches, flat-roof windows or ventilation openings in the protective zone.
- There must be no ignition sources, such as plug sockets, light switches, lamps, electrical switches or other permanent ignition sources, in the protective zone.
- The protective zone must not extend to adjacent buildings or public traffic areas.  
In the protective zone, you are not permitted to make any subsequent structural alterations which infringe the stated rules for the protective zone.


#### 4.1.1 Protective zone for ground installation on the premises

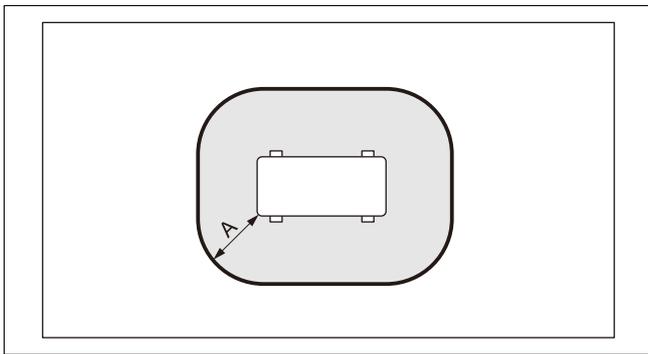

A 1000mm

Dimension A is a clearance around the product.


#### 4.1.2 Protective zone for ground installation in front of a building wall

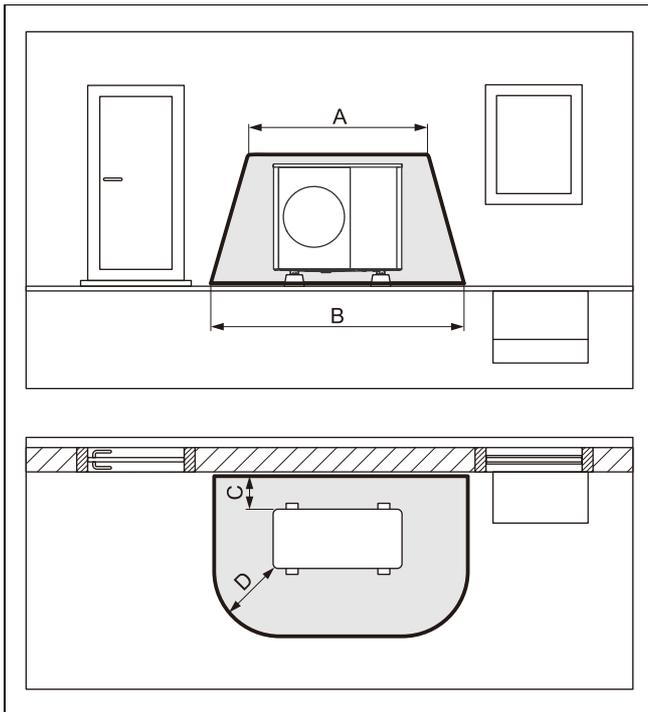

A 2100 mm                      C 200 mm/250 mm  
B 3100 mm                      D 1000 mm

Dimension C is the minimum clearance that must be maintained to the wall (→ Section 7).


#### 4.1.3 Protective zone for ground installation in a building corner

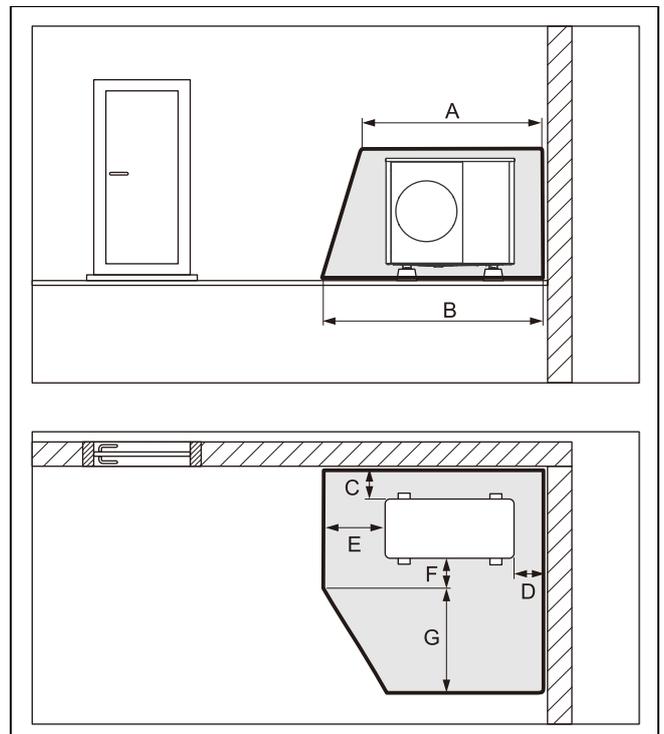

A 2100 mm                      E 1000 mm  
B 2600 mm                      F 500 mm  
C 200 mm/250 mm              G 1800 mm  
D 500 mm

The right-hand corner of the building is shown here.  
Dimensions C and D are the minimum clearances that must be maintained to the wall (→ Section 7).  
Dimension D varies for the left-hand corner of the building.

#### 4.1.4 Protective zone for wall installation in front of a building wall

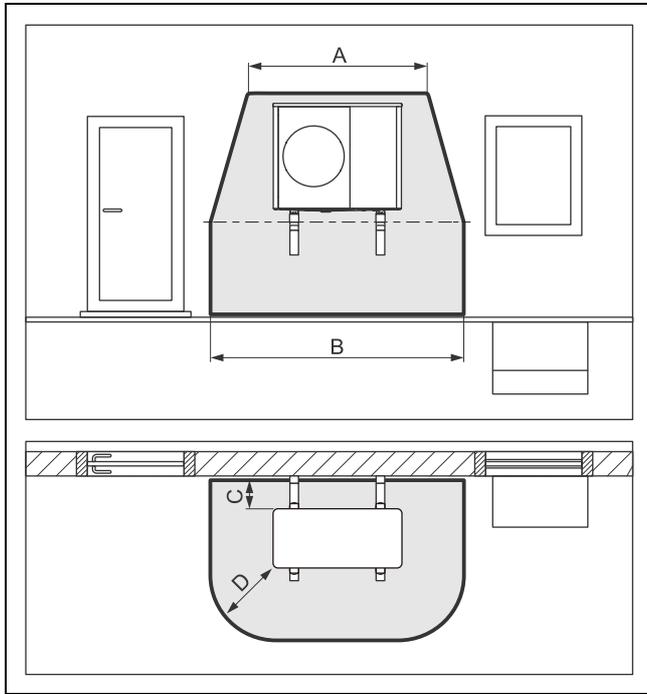


A 2100mm      C 200mm/250mm  
 B 3100mm      D 1000mm

The protective zone below the product extends as far as the floor.

Dimension C is the minimum clearance that must be maintained to the wall (→ Section 7).

#### 4.1.5 Protective zone for wall installation in a building corner

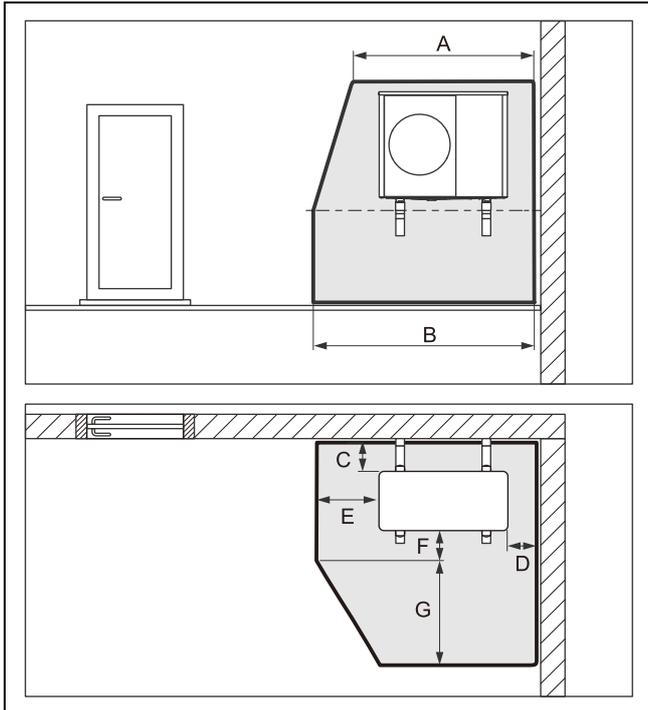

A 2100mm      E 1000mm  
 B 2600mm      F 500mm  
 C 200mm/250mm      G 1800mm  
 D 500mm


The protective zone below the product extends as far as the floor.

The right-hand corner of the building is shown here.

Dimension C is the minimum clearance that must be maintained to the wall (→ Section 7).

Dimension D varies for the left-hand corner of the building.

#### 4.1.6 Protective zone for flat-roof installation

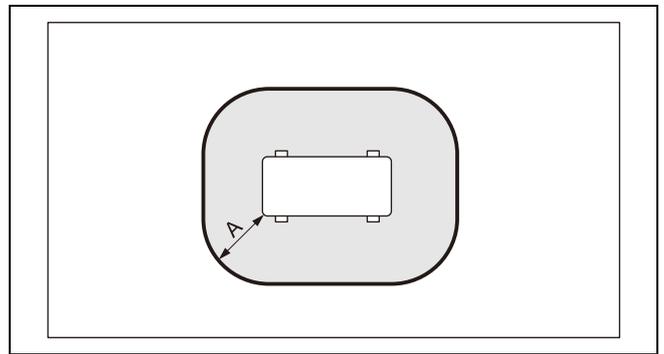

A 1000 mm

Dimension A is a clearance around the product.

## 5. BEFORE INSTALLATION

- Before installation
- Be sure to confirm the model name and the serial number of the unit.
- The product contains the combustible refrigerant R290. The refrigerant may mix with air to form a flammable atmosphere.
- There is a risk of fire and explosion.
  - Only carry out the work if you are competent at handling R290 refrigerant.
  - Wear suitable personal protective equipment and bring a fire extinguisher with you.
  - Only use tools and units that are permitted for R290 refrigerant and are in proper working condition.
  - Ensure that no air gets into the refrigerant circuit, into refrigerant-carrying tools or units, or into the refrigerant cylinder.
  - Note that the refrigerant R290 must never be introduced into the sewage system.


### • Handling

Due to relatively large dimensions and heavy weight, the unit should only be handled using lifting tools with slings. The slings can be fitted into foreseen sleeves at the base frame that are made specifically for this purpose.


When the unit needs to be hung up during installation, and there must be soft material between the rope and the unit to prevent damage to the heat pump unit.

### CAUTION

- To avoid injury, do not touch the air inlet or aluminum fins of the unit.
- Do not use the grips in the fan grills to avoid damage.
- The unit is top heavy! Prevent the unit from falling due to improper inclination during handling.

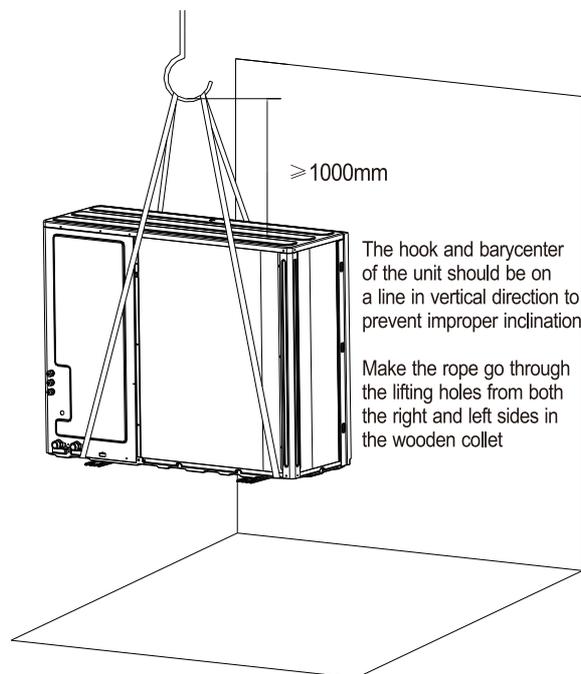

The position of barycenter for different units can be seen in the picture below

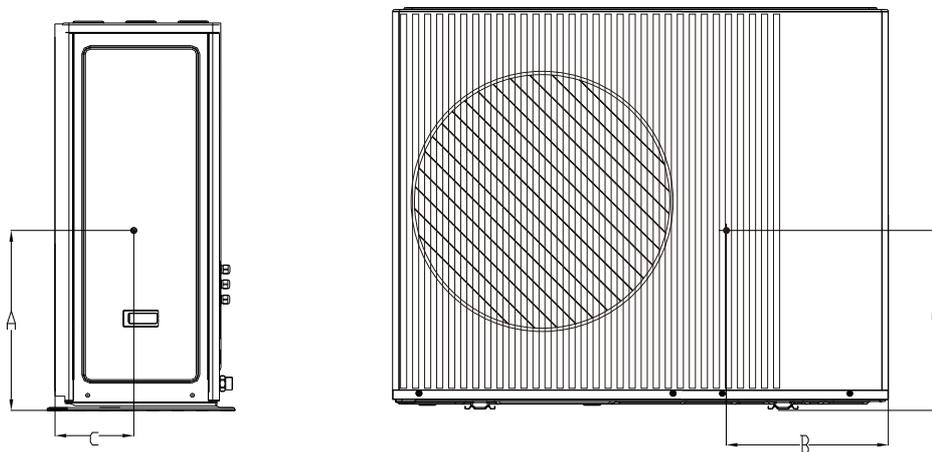

(unit:mm)

Model	A	B	C
4/6kW	300	400	180
8/10kW	550	480	280
12/14/16kW	500	470	245

## 6. IMPORTANT INFORMATION FOR THE REFRIGERANT

This product has the fluorinated gas, which is forbidden to release to air.

Refrigerant type: R290 ; Volume of GWP: 3

GWP=Global Warming Potential

Model	Factory charged refrigerant volume in the unit	
	Refrigerant /kg	Tonnes CO <sub>2</sub> equivalent /tCO <sub>2</sub> eq.
4kW	0.55	0.00165
6kW	0.55	0.00165
8kW	0.85	0.00225
10 kW	0.85	0.00225
12 kW	1.35	0.00405
14 kW	1.35	0.00405
16 kW	1.35	0.00405

### CAUTION

#### Frequency of Refrigerant Leakage Checks

- For unit that contains fluorinated greenhouse gases in quantities of 5 tonnes of CO<sub>2</sub> equivalent or more, but of less than 50 tonnes of CO<sub>2</sub> equivalent, at least every 12 months, or where a leakage detection system is installed, at least every 24 months.
- For unit that contains fluorinated greenhouse gases in quantities of 50 tonnes of CO<sub>2</sub> equivalent or more, but of less than 500 tonnes of CO<sub>2</sub> equivalent at least every six months, or where a leakage detection system is installed, at least every 12 months.
- For unit that contains fluorinated greenhouse gases in quantities of 500 tonnes of CO<sub>2</sub> equivalent or more, at least every three months, or where a leakage detection system is installed, at least every six months.
- This air-conditioning unit is a hermetically sealed equipment that contains fluorinated greenhouse gases.
- Only certificated person is allowed to do installation, operation and maintenance.


## 7. INSTALLATION SITE

### WARNING

- There is flammable refrigerant in the unit and it should be installed in a well-ventilated site. If the unit is installed inside, an additional refrigerant detection device and ventilation equipment must be added in accordance with the standard EN378.
- Be sure to adopt adequate measures to prevent the unit from being used as a shelter by small animals.
- Small animals making contact with electrical parts can cause malfunction, smoke or fire.
- Please instruct the customer to keep the area around the unit clean.
- Select an installation site where the following conditions are satisfied and one that meets with your customer's approval.
  - Places that are well-ventilated.
  - Places where the unit does not disturb neighbors.
  - Safe places which can bear the unit's weight and vibration and where the unit can be installed at an even level.
  - Places where there is no possibility of flammable gas or product leak.
  - The equipment is not intended for use in a potentially explosive atmosphere.
  - Places where servicing space can be well ensured.
  - Places where the units' piping and wiring lengths come within the allowable ranges.
  - Places where water leaking from the unit cannot cause damage to the location (e.g. in case of a blocked drain pipe).
  - Places where rain can be avoided as much as possible.
  - Do not install the unit in places often used as a work space. In case of construction work (e.g. grinding etc.) where a lot of dust is created, the unit must be covered.
  - Do not place any object or equipment on top of the unit (top plate).
  - Do not climb. sit or stand on top of the unit.
  - Be sure that sufficient precautions are taken in case of refrigerant leakage according to relevant local laws and regulations.
  - Don't install the unit near the sea or where there is corrosion gas.
- When installing the unit in a place exposed to strong wind, pay special attention to the following.
- Strong winds of 5 m/sec or more blowing against the unit's air outlet causes a short circuit (suction of discharge air), and this may have the following consequences:
  - Deterioration of the operational capacity.
  - Frequent frost acceleration in heating operation.
  - Disruption of operation due to rise of high pressure.
  - When a strong wind blows continuously on the front of the unit, the fan can start rotating very fast until it breaks. In normal condition, refer to the figures below for installation of the unit.
- The product is filled with R290 refrigerant.
  - Refrigerant must only be disposed of by an authorized competent person.
  - Observe the general safety information.


To guarantee sufficient air flow and to facilitate maintenance work, observe the minimum clearances that are specified. Ensure that there is sufficient room to install the hydraulic lines.

**Validity: Floor installation OR Flat roof installation**

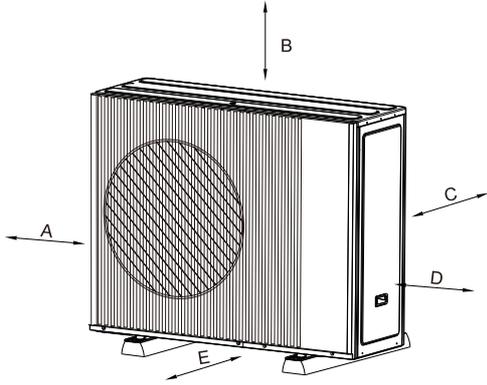


Minimum clear-ance	Heating mode	Heating and cooling mode
A	100 mm	100 mm
B	1000 mm	1000 mm
C	200 mm	250 mm
D	500 mm	500 mm
E	600 mm	600 mm

**Validity: Wall-mounting**

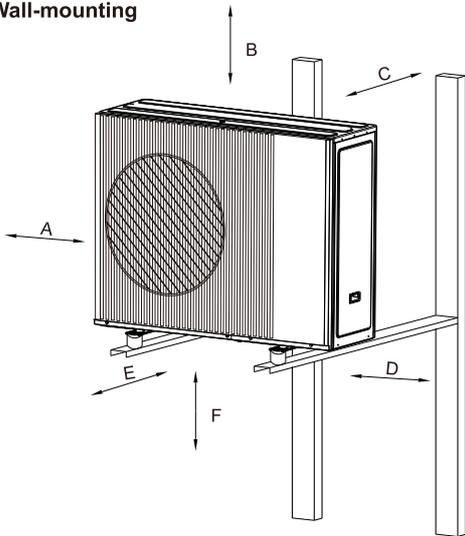

Minimum clear-ance	Heating mode	Heating and cooling mode
A	100 mm	100 mm
B	1000 mm	1000 mm
C	200 mm	250 mm
D	500 mm	500 mm
E	600 mm	600 mm
F	300 mm	300 mm

Make sure there is enough room to do the installation. Set the outlet side at a right angle to the direction of the wind.

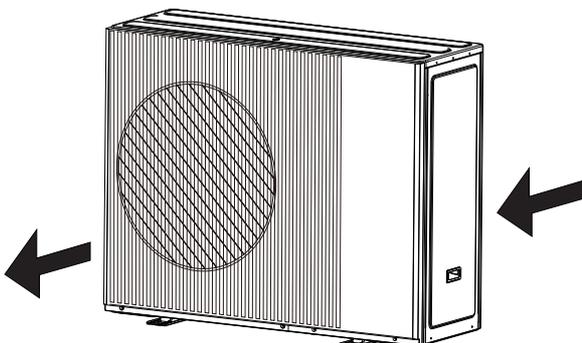

Prepare a water drainage channel around the foundation, to drain waste water from around the unit. If water does not easily drain from the unit, mount the unit on a foundation of concrete blocks, etc. (the height of the foundation should be about 100 mm (3.93 in)).

If you install the unit on a frame, please install a waterproof plate (about 100 mm) on the underside of the unit to prevent water from coming in from the low side.

When installing the unit in a place frequently exposed to snow, pay special attention to elevate the foundation as high as possible.

If you install the unit on a building frame, please install a waterproof tray (field supply) (about 100mm, on the underside of the unit) in order to avoid drain water dripping. (See the picture in the right).



## 7.1 Selecting a location in cold climates

Refer to "Handling" in section "5 Before installation"

### NOTE

When operating the unit in cold climates, be sure to follow the instructions described below.


To prevent exposure to wind, install the unit with its suction side facing the wall.

Never install the unit at a site where the suction side may be exposed directly to wind.

To prevent exposure to wind, install a baffle plate on the air discharge side of the unit.

In heavy snowfall areas, it is very important to select an installation site where the snow will not affect the unit.

If lateral snowfall is possible, make sure that the heat exchanger coil is not affected by the snow (if necessary construct a lateral canopy).

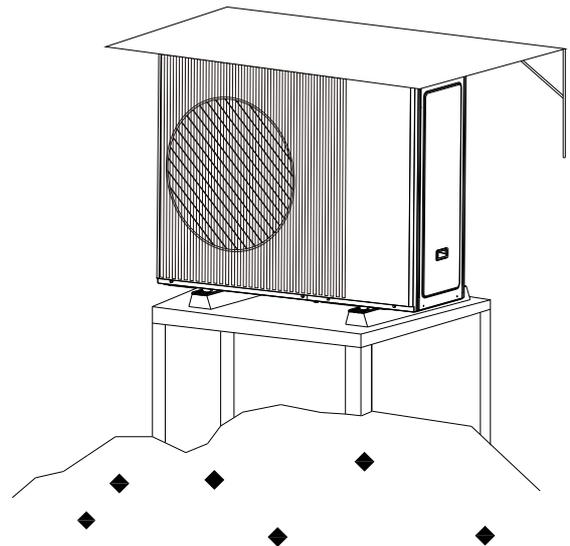

① Construct a large canopy.

② Construct a pedestal.


Install the unit high enough off the ground to prevent it from being buried in snow.

## 7.2 Selecting a location in hot climates

As the outdoor temperature is measured via the outdoor unit air thermistor, make sure to install the outdoor unit in the shade or a canopy should be constructed to avoid direct sunlight, so that it is not influenced by the sun's heat, otherwise protection may be possible to the unit. enough off the ground to prevent it from being buried in snow.

## 8. INSTALLATION PRECAUTIONS


### 8.1 Dimensions

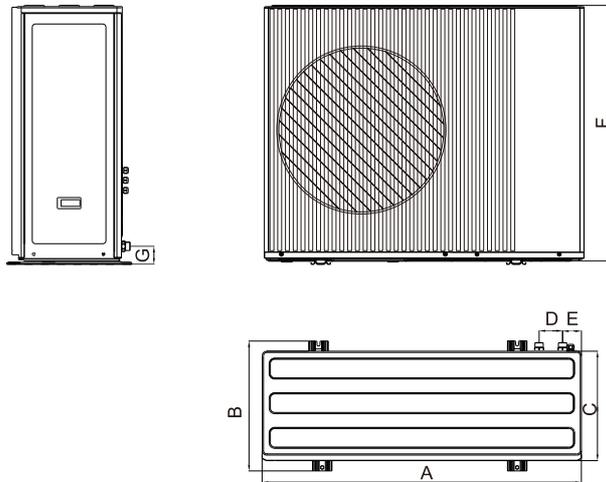


Model	A	B	C	D	E	F	G
4/6kW	1130	480	450	102	116	710	67
8/10/12/14/16kW	1280	480	450	94	81	1040	72

### 8.2 Installation requirements

Check the strength and level of the installation ground so that the unit may not cause any vibrations or noise during its operation. In accordance with the foundation drawing in the figure, fix the unit securely by means of foundation bolts. (Prepare four sets each of  $\phi 10$  Expansion bolts, nuts and washers which are readily available in the market.) Screw in the foundation bolts until their length is 20 mm from the foundation surface.

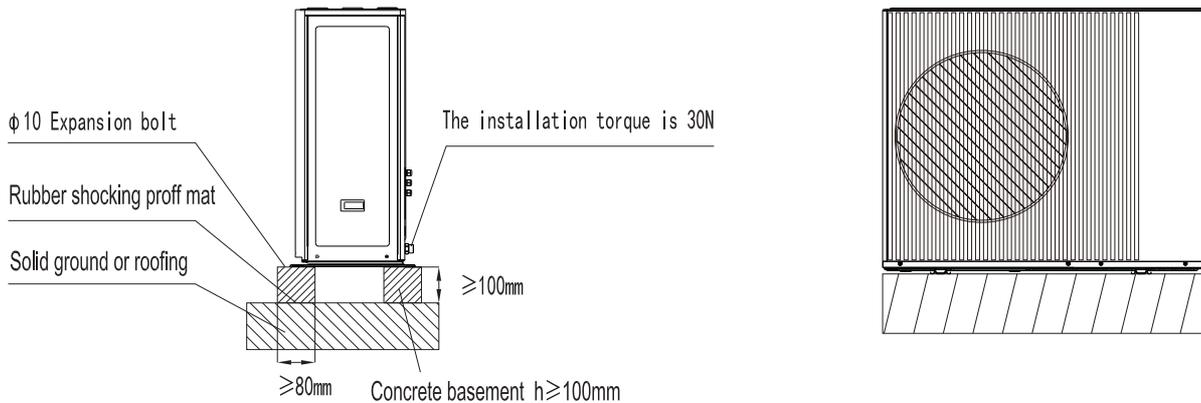

### 8.3 Drain hole position

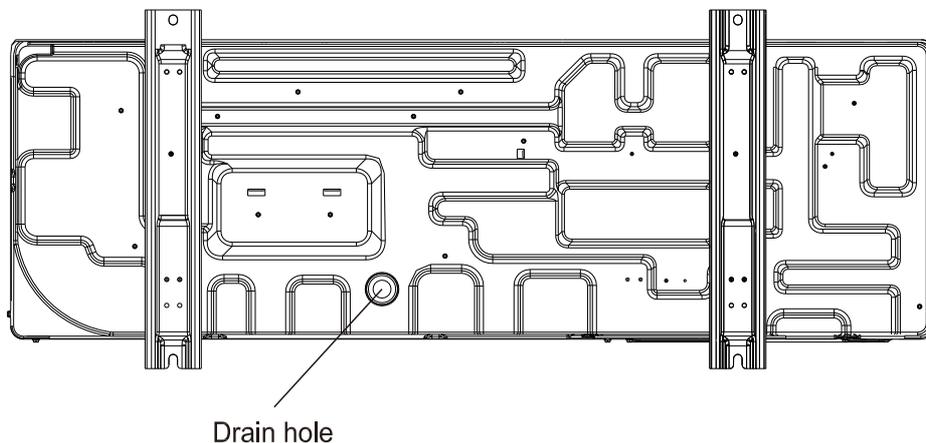


#### NOTE

It's necessary to install an electrical heating belt if water can't drain out in cold weather even the big drain hole has opened.


## 8.4 Servicing space requirements

### 8.4.1 In case of stacked installation

1) In case obstacles exist in front of the outlet side.

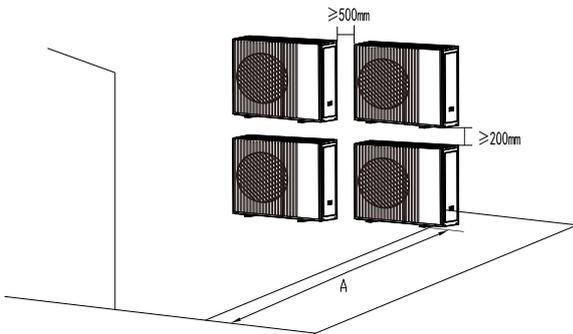


2) In case obstacles exist in front of the air inlet.

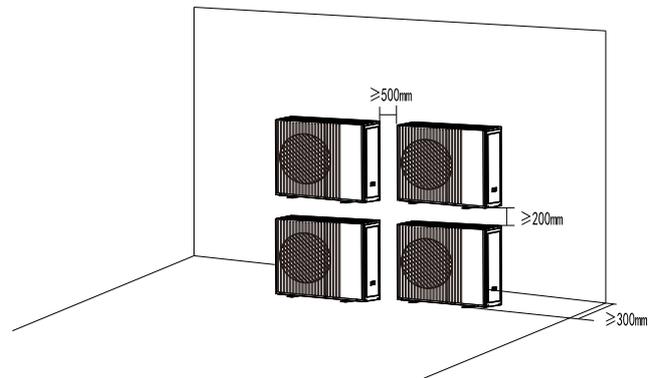

Unit	A(mm)
4~6kW	≥1000
8~16kW	≥1500

### 8.4.2 In case of multiple-row installation (for roof top use, etc.)

In case of installing multiple units in lateral connection per row.

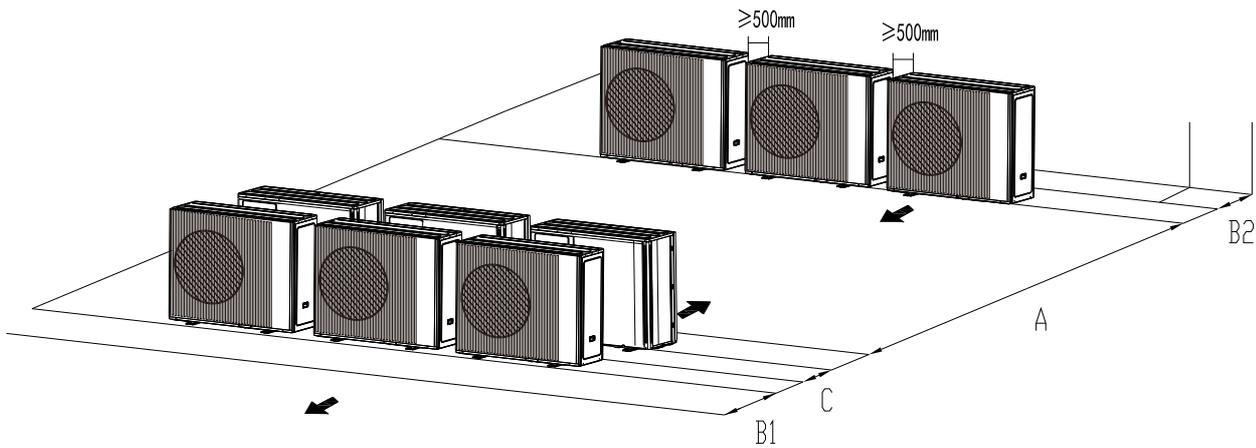


Unit	A(mm)	B1(mm)	B2(mm)	C(mm)
4~6kW	≥2500	≥1000	≥300	≥600
8~16kW	≥3000	≥1500		

## 9. TYPICAL APPLICATIONS

### 9.1 Space Heating Only

- The room thermostat is used as a switch.
- When there is a heating request from the room thermostat, the unit operates to achieve the target water temperature set on the Wired controller.
- When the room temperature reaches the thermostats set temperature, the unit stops.
- When the heating terminal uses floor heating and Heating radiator at the same time, the two ends of the floor heating and low temperature radiator require different working water temperatures.
- In order to meet these two different working water temperatures at the same time, it is necessary to install a mixing valve and a mixing water pump at the inlet and outlet of the floor heating.
- The outlet water temperature of the unit is set to the water temperature required by the heating radiator, and the water mixing valve and water mixing pump are set to reduce the inlet water temperature of the floor heating.

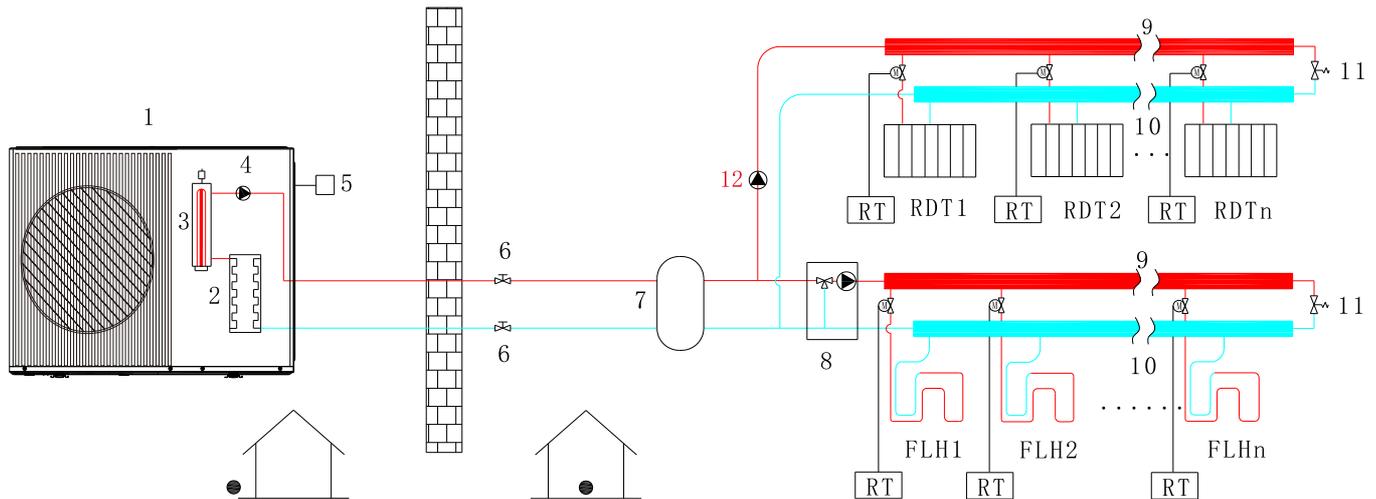


#### REMARK

1	Outdoor unit	6	Stop valve (local)	11	Bypass valve
2	Plate heater exchange	7	Balance water tank	12	External circulation pump
3	Backup electric heater(optional)	8	Mixing valve and mixing water pump	RDT	Heating radiator
4	Internal circulating pump	9	Distributor	FLH	Floor heating loops
5	Wired controller	10	Collector	RT	Room thermostats

### 9.2 Space Heating and Domestic Hot Water

- The room thermostats also can connect to a motorized valve.
- Each room's temperature is regulated by the motorized valve on its water circuit.
- Domestic hot water is supplied from the domestic hot water tank connected to the hydraulic module.
- The water tank should built in a temperature sensor which connect to the hydraulic module.
- A bypass valve is required.

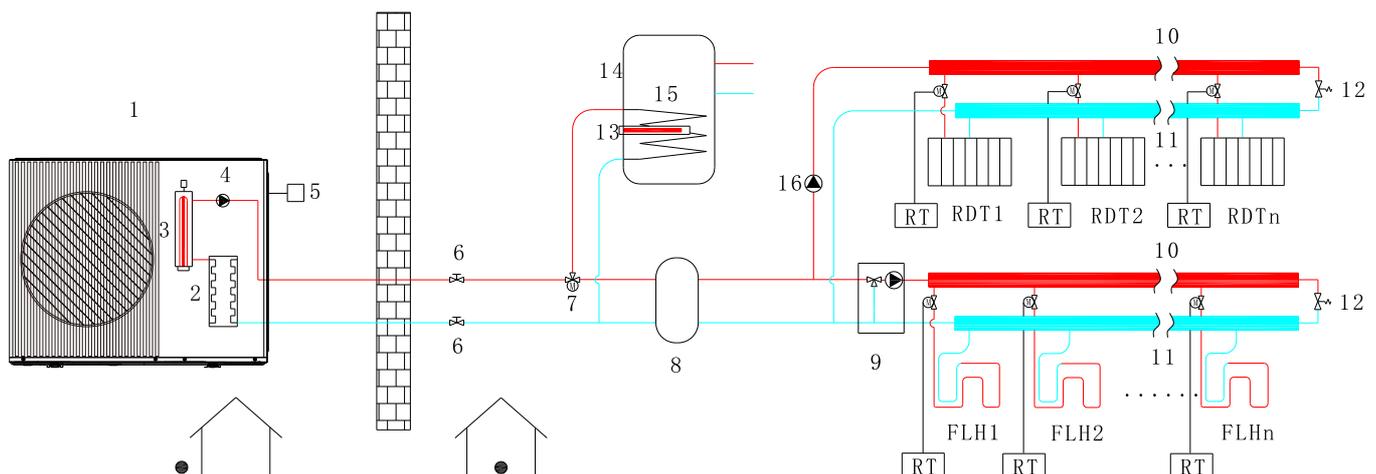


#### REMARK

1	Outdoor unit	8	Balance water tank	15	Coil in the water tank
2	Plate heater exchange	9	Mixing valve and mixing water pump	16	External circulation pump
3	Backup electric heater	10	Distributor	RDT	Heating Radiator
4	Internal circulating pump	11	Collector	FLH	Floor heating loops
5	Wired controller	12	Bypass valve	RT	Room thermostats
6	Stop valve (field supplied)	13	Electric heating		
7	Motorized 3way valve	14	Domestic hot water tank		

### 9.3 Space Heating, Space Cooling and Domestic Hot Water


- Floor heating loops & Heating radiator & Fan coil units are used for space heating, fan coil units are used for space cooling.
- Domestic hot water is supplied from the domestic hot water tank connected to the hydraulic module.
- The unit switches to heating or cooling mode according to the temperature detected by the room thermostat.
- In space cooling mode, the 2way valve is closed to prevent cold water entering the floor heating loops & Heating radiator.

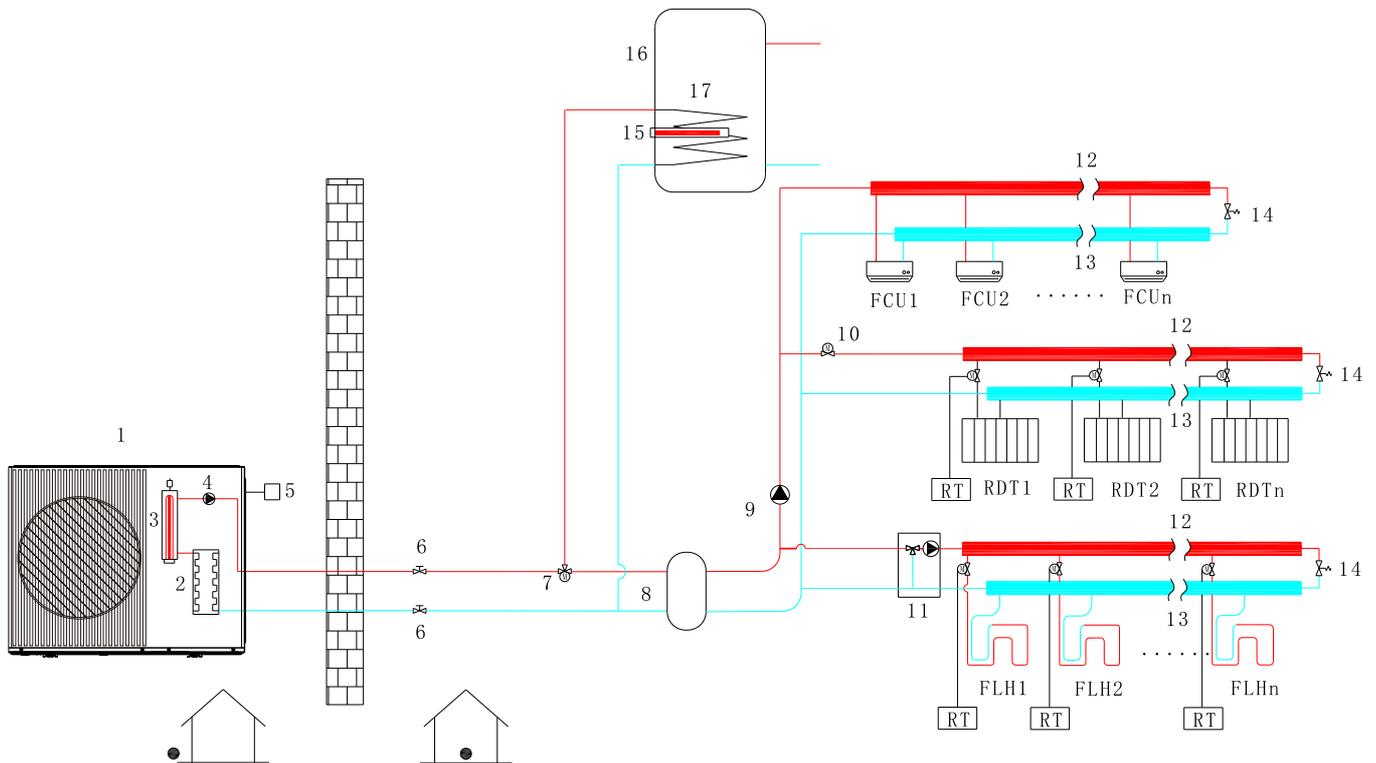

REMARK					
1	Outdoor unit	8	Balance water tank	15	Electric heating
2	Plate heater exchange	9	External circulation pump	16	Domestic hot water tank
3	Backup electric heater(optional)	10	Two way valve	17	Coil in the water tank
4	Internal circulating pump	11	Mixing valve and mixing water pump	RDT	Heating Radiator
5	Wired controller	12	Distributor	FLH	Floor heating loops
6	Stop valve	13	Collector	FCU	Fan coil units
7	Motorized 3way valve	14	Bypass valve	RT	Room thermostats

### 9.4 Space Heating and Space Cooling


- Floor heating loops & Heating radiator & fan coil units are used for space heating, fan coil units are used for space cooling.
- In space cooling mode, the 2way valve is closed to prevent cold water entering the floor heating loops & Heating radiator.

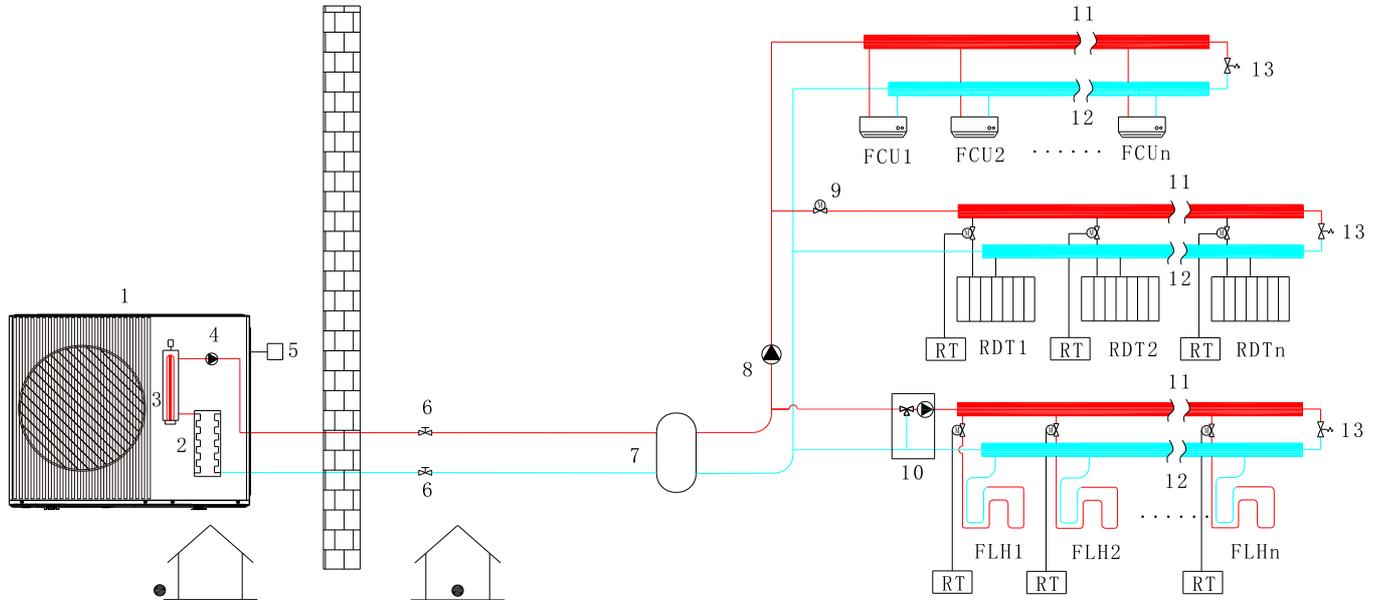

REMARK					
1	Outdoor unit	7	Balance water tank	13	Bypass valve
2	Plate heater exchange	8	External circulation pump	RDT	Radiator
3	Backup electric heater(optional)	9	Two way valve	FLH	Floor heating loops
4	Internal circulating pump	10	Mixing valve and mixing water pump	FCU	Fan coil units
5	Wired controller	11	Distributor	RT	Room thermostats
6	Stop valve	12	Collector		

### 9.5 Auxiliary heat source provides space heating only


Users can also use only gas water heaters for heating.

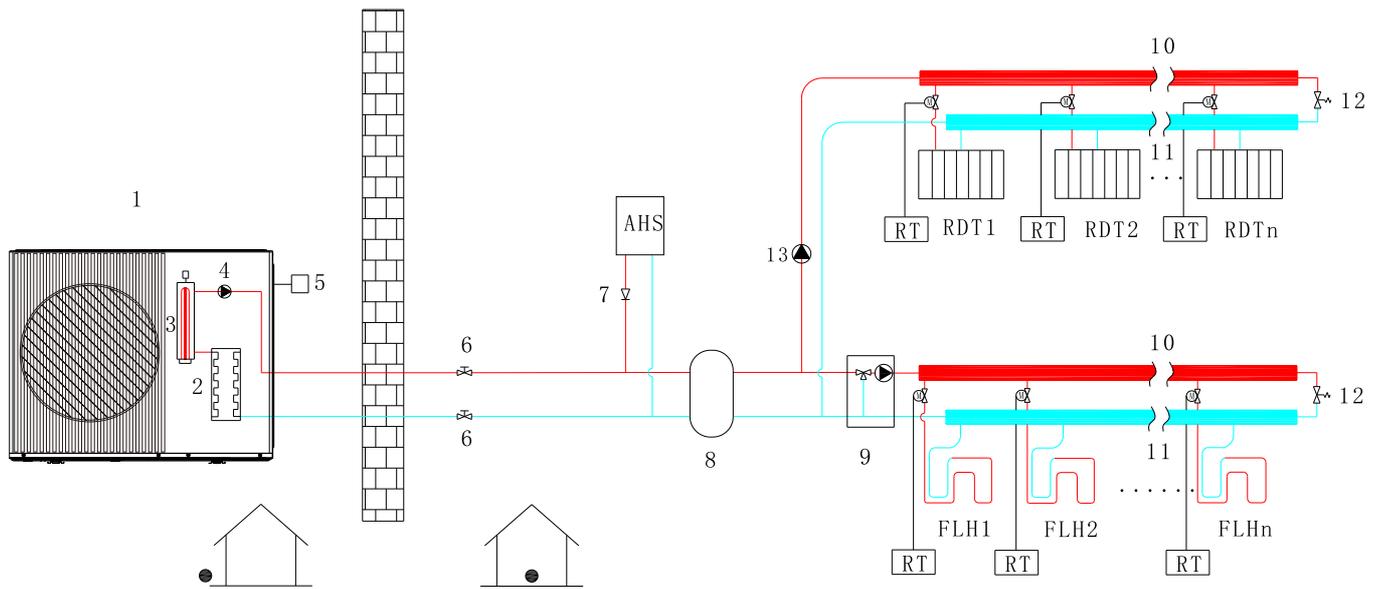

REMARK					
1	Outdoor unit	7	One way valve	13	External circulation pump
2	Plate heater exchange	8	Balance water tank	RDT	Heating Radiator
3	Backup electric heater(optional)	9	Mixing valve and mixing water pump	FLH	Floor heating loops
4	Internal circulating pump	10	Distributor	AHS	Auxiliary heating source
5	Wired controller	11	Water collector	RT	Room thermostats
6	Stop valve	12	Bypass valve		

## 9.6 Space Heating Through Floor Heating Loops and Fan Coil Units


- The floor heating loops and fan coil units require different operating water temperatures.
- To achieve these two set points, a mixing station is required.
- Room thermostats for each zone are optional.
- The outlet water temperature of the unit is set to the water temperature required by the fan coil unit, and the mixing valve and mixing pump are set to reduce the inlet water temperature of the floor heating.

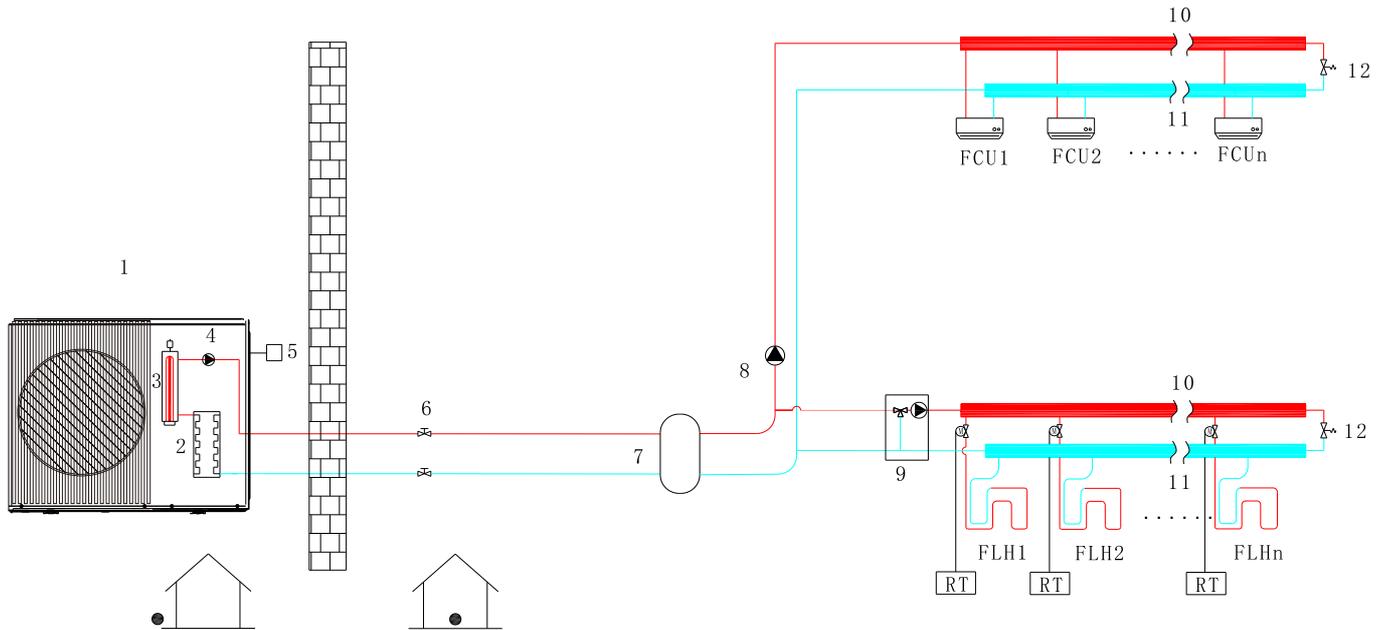

REMARK					
1	Outdoor unit	6	Stop valve	11	Collector
2	Plate heater exchange	7	Balance water tank	12	Bypass valve
3	Backup electric heater(optional)	8	External circulation pump	FCU	Fan coil units
4	Internal circulating pump	9	Mixing valve and mixing water pump	FLH	Floor heating loops
5	Wired controller	10	Distributor	RT	Room thermostats

## 9.7 Space Heating, Space Cooling and Domestic Hot Water Compatible with Solar Water Heater


- Floor heating loops & Heating Radiator & fan coil units are used for space heating, and fan coil units are used for space cooling.
- The temperature in the domestic hot water tank is controlled by the hydraulic module.
- A temperature sensor needs to be placed in the domestic hot water tank and connected to the hydraulic module.
- When it is detected that the temperature of the domestic hot water tank is lower than the set temperature and meets the requirements for solar hot water activation, when conditions are met, turn on the solar water pump to realize the solar hot water function.

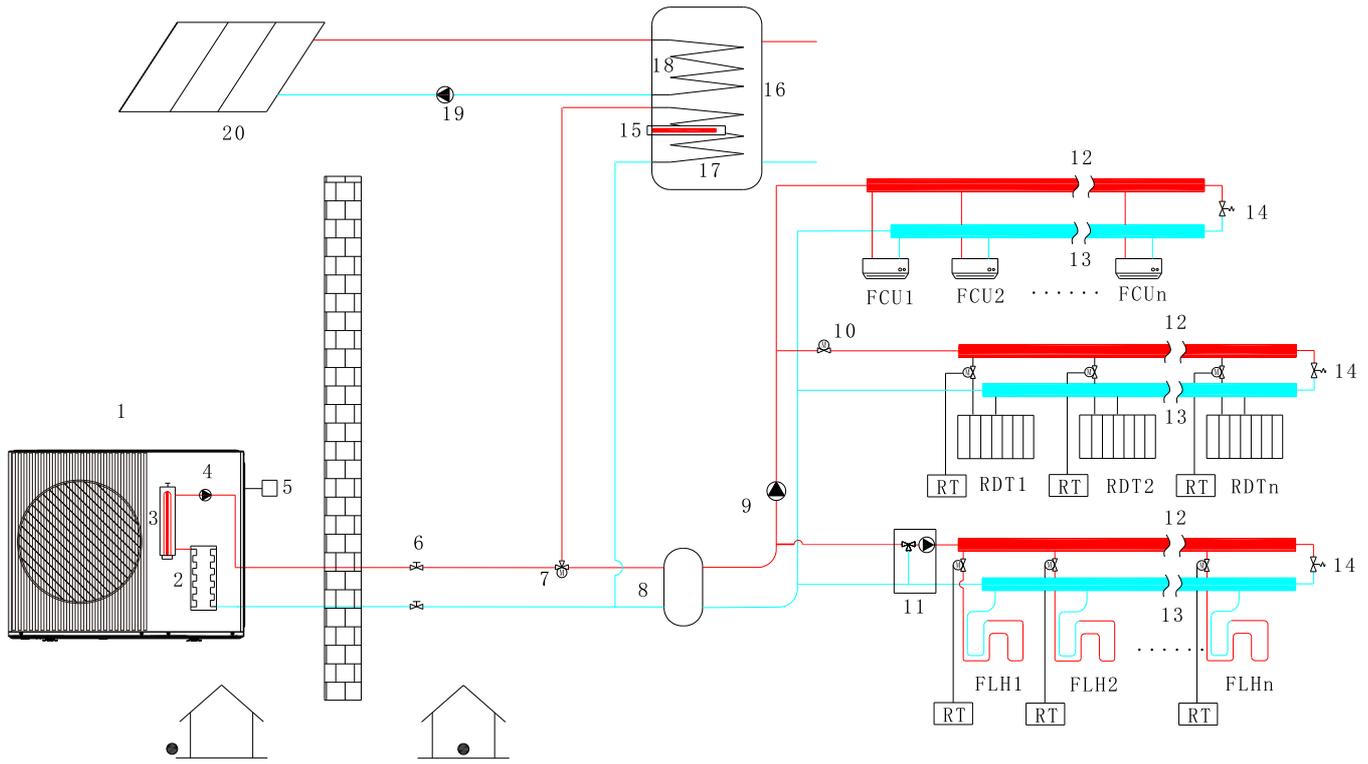

REMARK					
1	Outdoor unit	9	External circulation pump	17	Coil 1 in the water tank
2	Plate heater exchange	10	Two way valve	18	Coil 2 in the water tank
3	Backup electric heater(optional)	11	Mixing valve and mixing water pump	19	solar water pump
4	Internal circulating pump	12	Distributor	20	Solar panel
5	Wired controller	13	Water collector	RDT	Heating Radiator
6	Stop valve	14	Bypass valve	FLH	Floor heating loops
7	Motorized 3way valve	15	Electric heating	FCU	Fan coil units
8	Balance water tank	16	Domestic hot water tank	RT	Room thermostats

## 9.8 Space Heating with heat pump and AHS, space cooling with heat pump and solar for hot water

- When the heating insufficient, the gas boiler (AHS) is used as an additional heat source, and floor heating or fan coils or low temperature radiators are used for space heating (also can be used in combination with various types of terminals).
- The fan coil is used for space cooling.
- The temperature in the domestic hot water tank is controlled by the hydraulic module.
- A temperature sensor needs to be placed in the domestic hot water tank and connected to the hydraulic module.
- When it is detected that the temperature of the domestic hot water tank is lower than the set temperature and meets the requirements for solar hot water activation, when conditions are met, turn on the solar water pump to realize the solar hot water function.

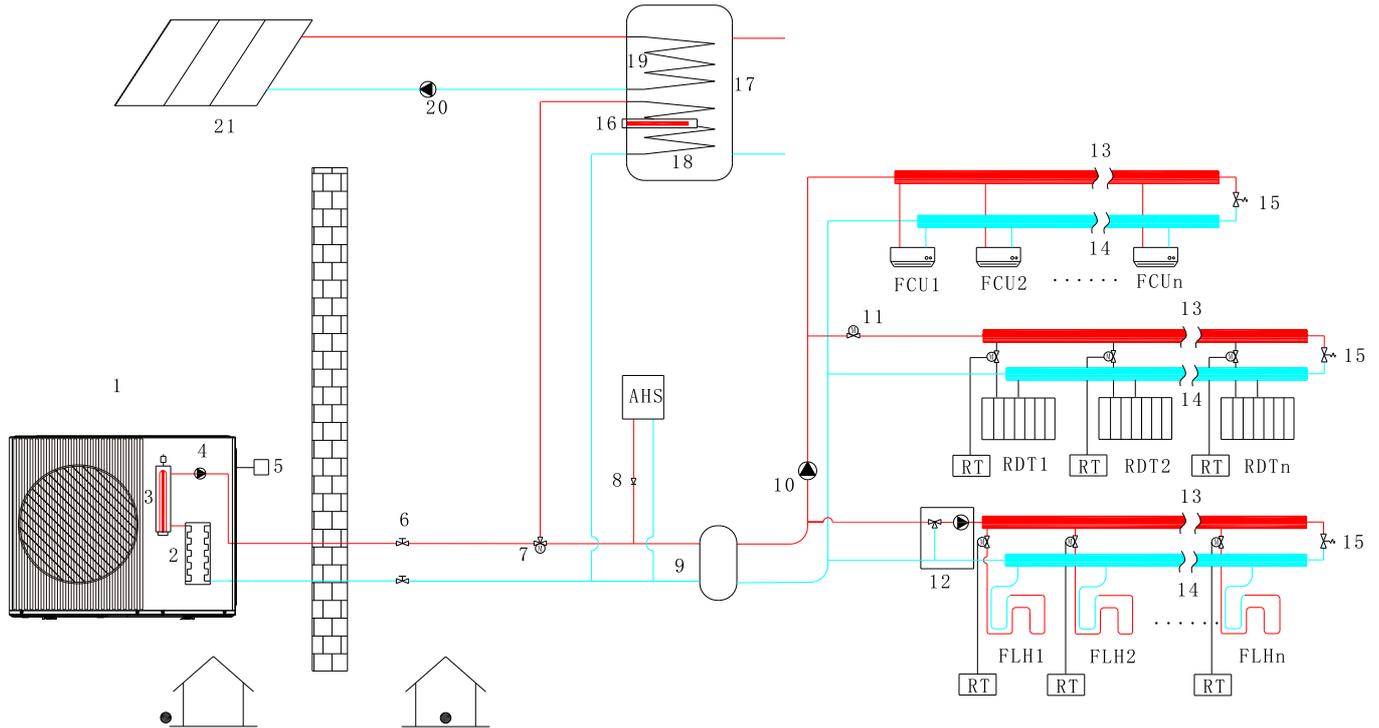

### REMARK

1	Outdoor unit	10	External circulation pump	19	Coil 2 in the water tank
2	Plate heater exchange	11	One way valve	20	solar water pump
3	Backup electric heater(optional)	12	Mixing valve and mixing water pump	21	Solar panel
4	Internal circulating pump	13	Distributor	RDT	Radiator
5	Wired controller	14	Water collector	FLH	Floor heating loops
6	Stop valve	15	Bypass valve	FCU	Fan coil units
7	Motorized 3way valve	16	Electric heating valve	RT	Room thermostats
8	One way valve	17	Domestic hot water tank		
9	Balance water tank	18	Coil 1 in the water tank		

### CAUTION

Make sure to connect the MV1 / MV2 / MV3 terminals in the wired controller correctly, please refer to 10.3

### The Balance tank volume requirement


NO.	model	Balance tank(L)
1	4~6kW	≥ 25
2	8~16kW	≥ 40

# 10. OVERVIEW OF THE UNIT

## 10.1 Disassembling the unit

Door 1 To access to the hydraulic compartment and electrical parts.

Door 2 To access to the compressor.

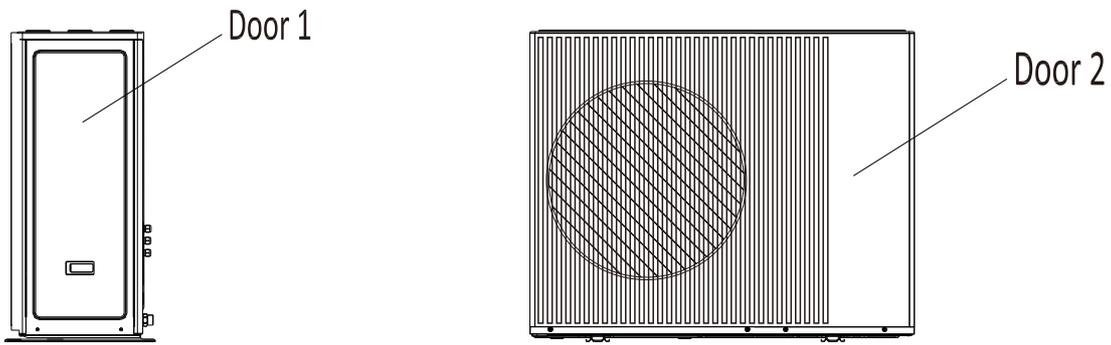


### WARNING

Switch off all power — i.e. unit power supply and backup heater and domestic hot water tank power supply (if applicable) — before removing door 1 and door 2.

Parts inside the unit may be hot.

## 10.2 Main components

### 10.2.1 Hydraulic module

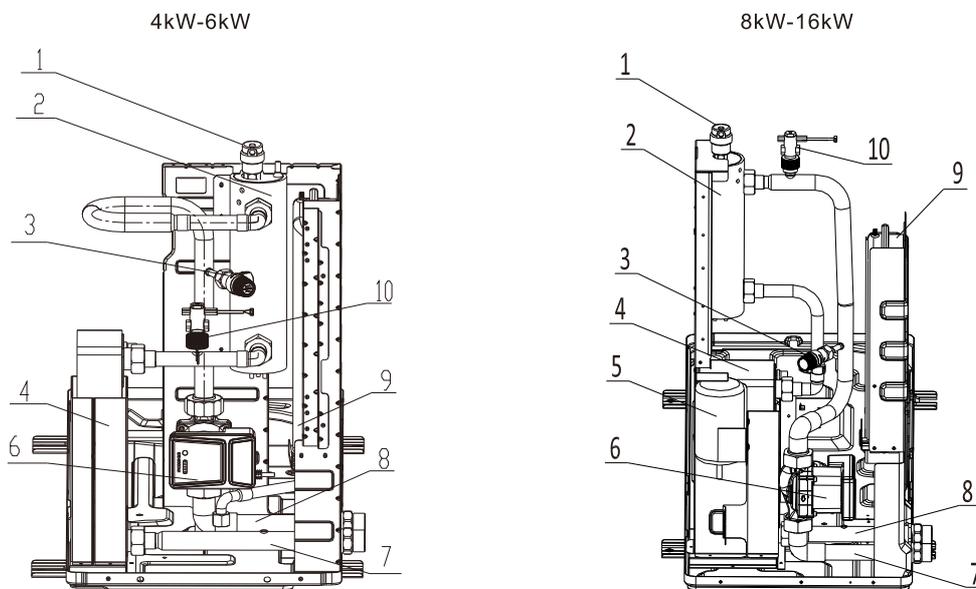


With backup heater for example (optional)

Code	Assembly	Explanation
1	Automatic air purge valve	Remaining air in the water circuit will be automatically removed via the automatic air purge valve.
2	Internal backup beater	The backup heater consists of an electrical heating element that will provide additional heating capacity to the water circuit if the heating capacity of the heat pump is insufficient due to low outdoor temperature, it also protects the external water piping from freezing during cold periods.
3	Pressure relief valve	The pressure relief valve prevente excessive water pressure in the water circuit by opening at 43.5 psi(g)/0.3Mpa(g) and discharging some water.
4	Plate heat exchanger	Heat exchanging between water and refrigerant.
5	Refrigerant storage tank	Only 12kW~16kW.
6	Pump_i	The pump circulates the water in the water circuit.
7	Water outlet pipe	/
8	Water inlet pipe	/
9	Expansion vessel(5L)	/
10	Flow switch	If water flow is below 0.6m³/h, the flow switch off (8kW~16kW) If water flow is below 0.36m³/h, the flow switch off (4kW~6kW)


### 10.3 Electronic control box

The figure is only for reference, please refer to the actual product.

#### 8kW-16kW(3-phase)

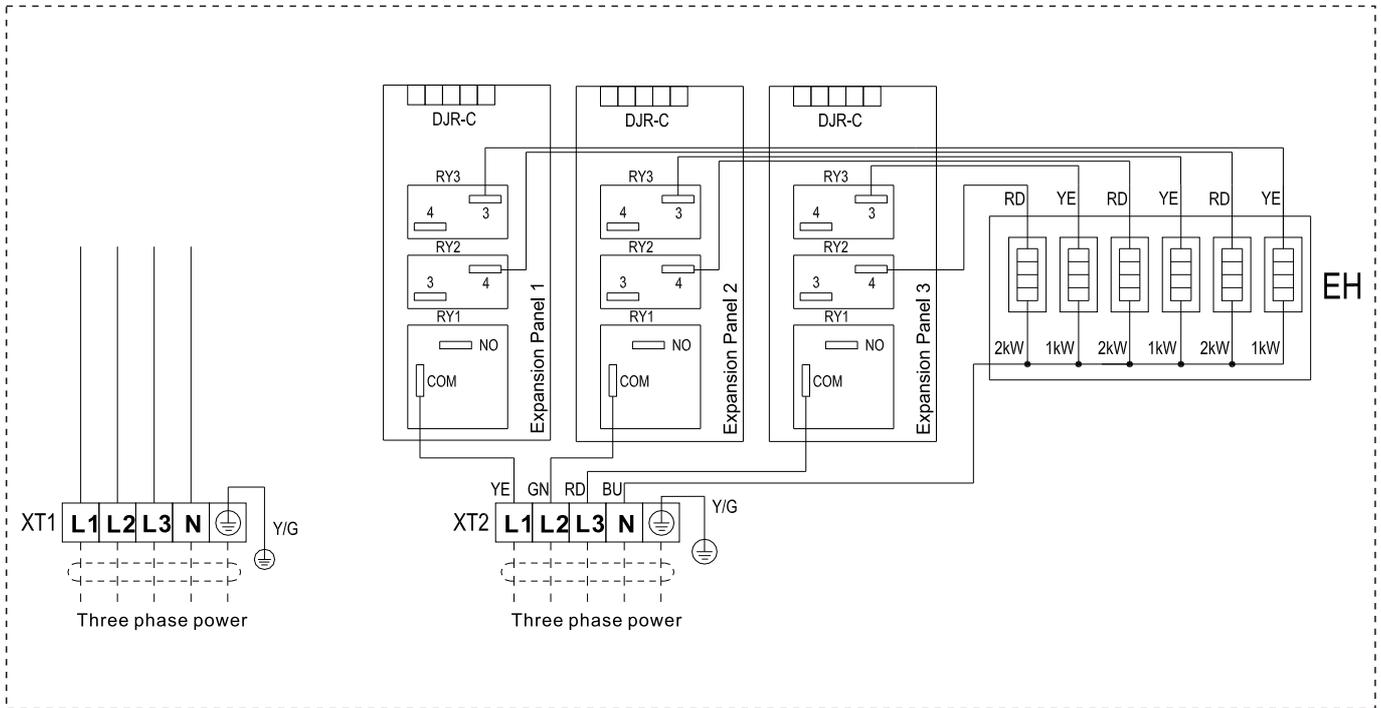


#### 4kW-16kW(1-phase)

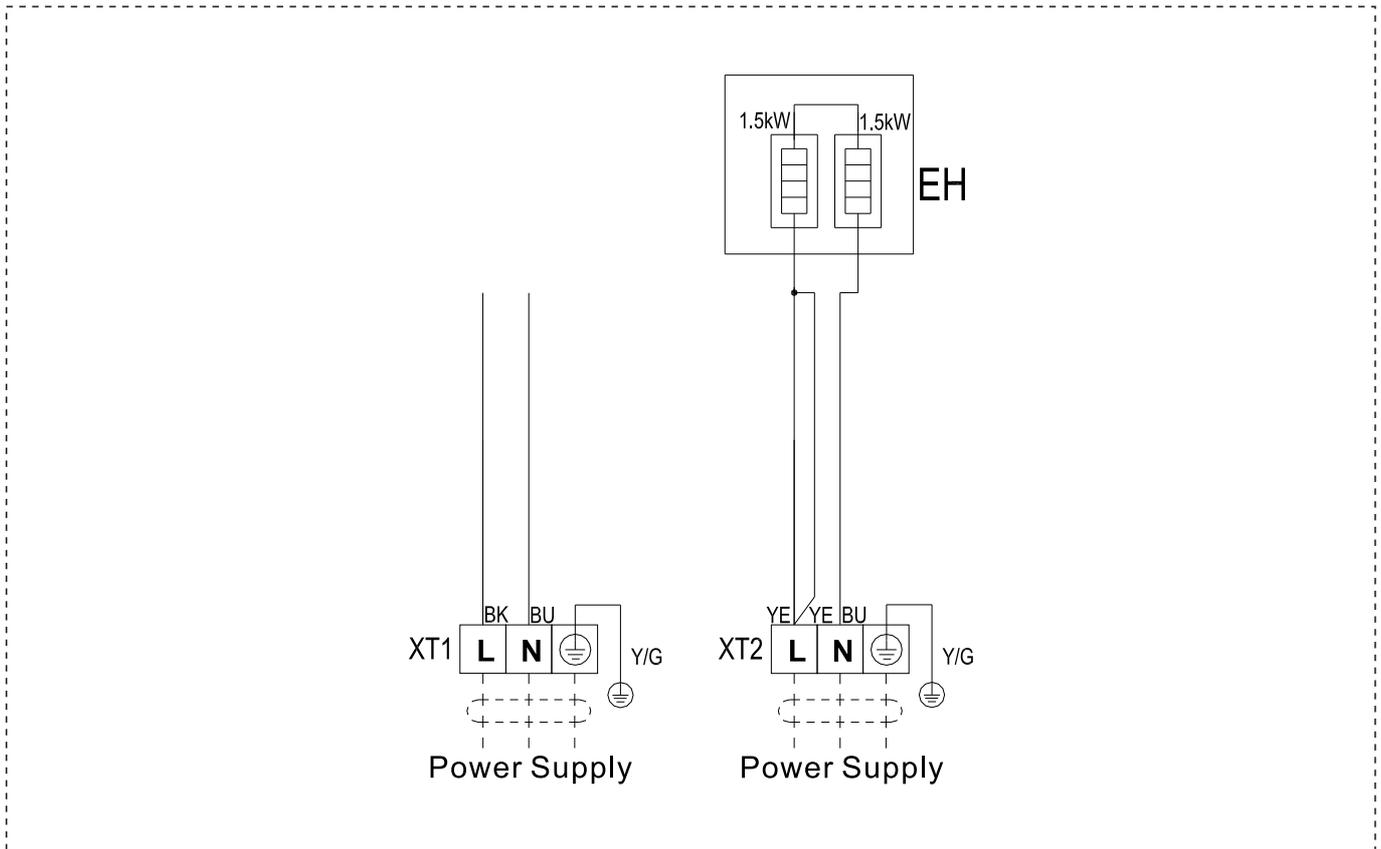


Position description

**12kW-16kW(3-phase)**

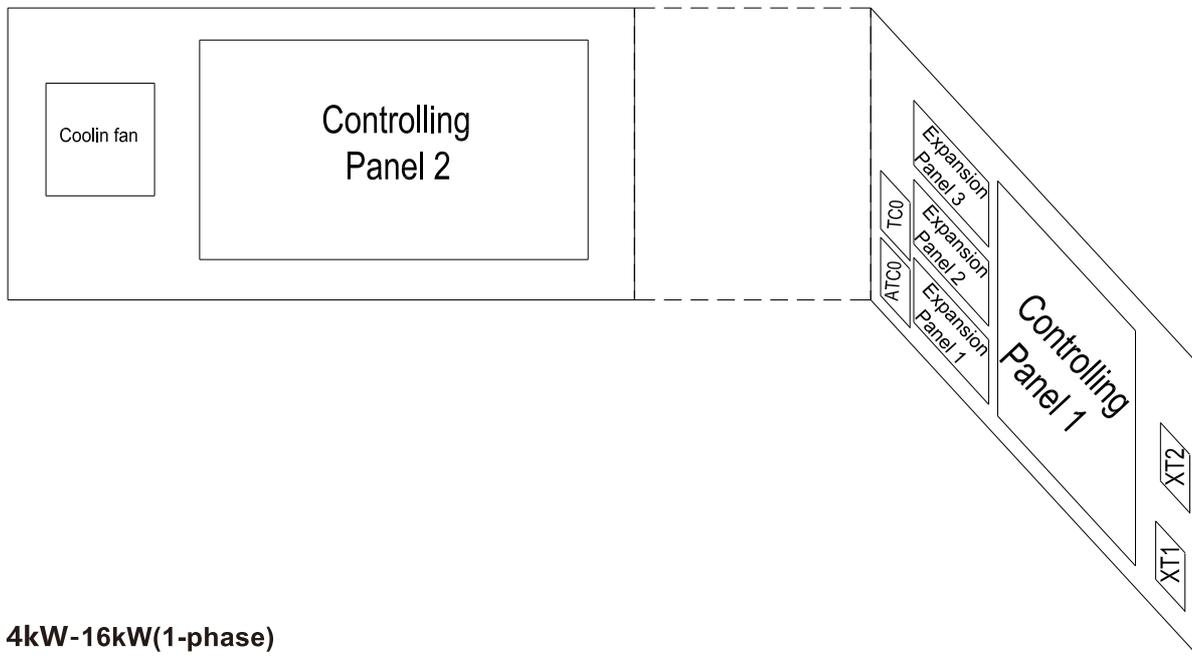

**4kW-16kW(1-phase)**

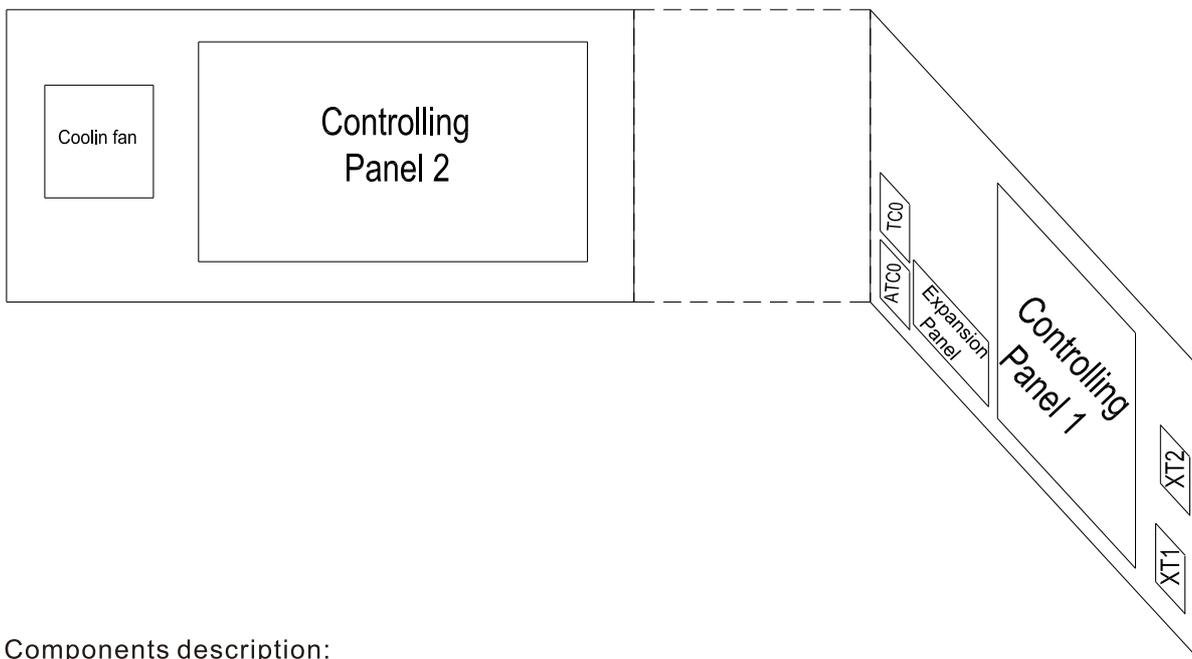


Components description:


R00M-SW-C1	Cool Zone1 Room thermostat (high voltage)
R00M-SW-H1	Heat Zone1 Room thermostat (high voltage)
R00M-SW-C2	Cool Zone2 Room thermostat (high voltage)
R00M-SW-H2	Heat Zone2 Room thermostat (high voltage)
R00M-C	Cool Zone1 Room thermostat (low voltage)
R00M-H	Heat Zone1 Room thermostat (low voltage)
R00M-C1	Cool Zone2 Room thermostat (low voltage)
R00M-H1	Heat Zone2 Room thermostat (low voltage)
TWO1	Outlet water temp. sensor of plate heat exchanger
TWO2	Outlet water temp. sensor of Electric heating
TWI	Inlet water temp. sensor of plate heat exchanger
TICO	Evaporator Outlet Sensor
TICI	Evaporator Inlet Sensor
TWT_BT1	Buffer tank temp. sensor1
TWT_BT2	Buffer tank temp. sensor2
TWI_FLH	Floor heating water inlet temp. sensor
TWT	Tank water temp. sensor
TAI	ZONE1 Room temp. sensor
TSOLAR	Solar panel temp. sensor
TAI_FLH	ZONE2 Room temp. sensor

T1	Temperature Sensor
T2	Compressor Suction Sensor
T3	Defrost Sensor
T4	Condensor Mid Sensor
T5	Exhaust Sensor
TCO	Manual Thermostat
ATCO	Automatic Thermostat
FLS	Water flow switch
EH	Electric Heater
XT1	Power terminal board
XT2	Heater Power terminal board
KM1	Zone1 PUMP AC Contactor2
KM2	DHW PIPE PUMP AC Contactor1
KM3	Electric heating for water tank AC contactor3
KM4	Solar PUMP AC contactor4
KM5	Zone 2 PUMP AC contactor5
KM6	Additional heat source AC contactor6
SG	Smart Grid
EVU	Commercial power

# 8KW~16KW (3-Phase)

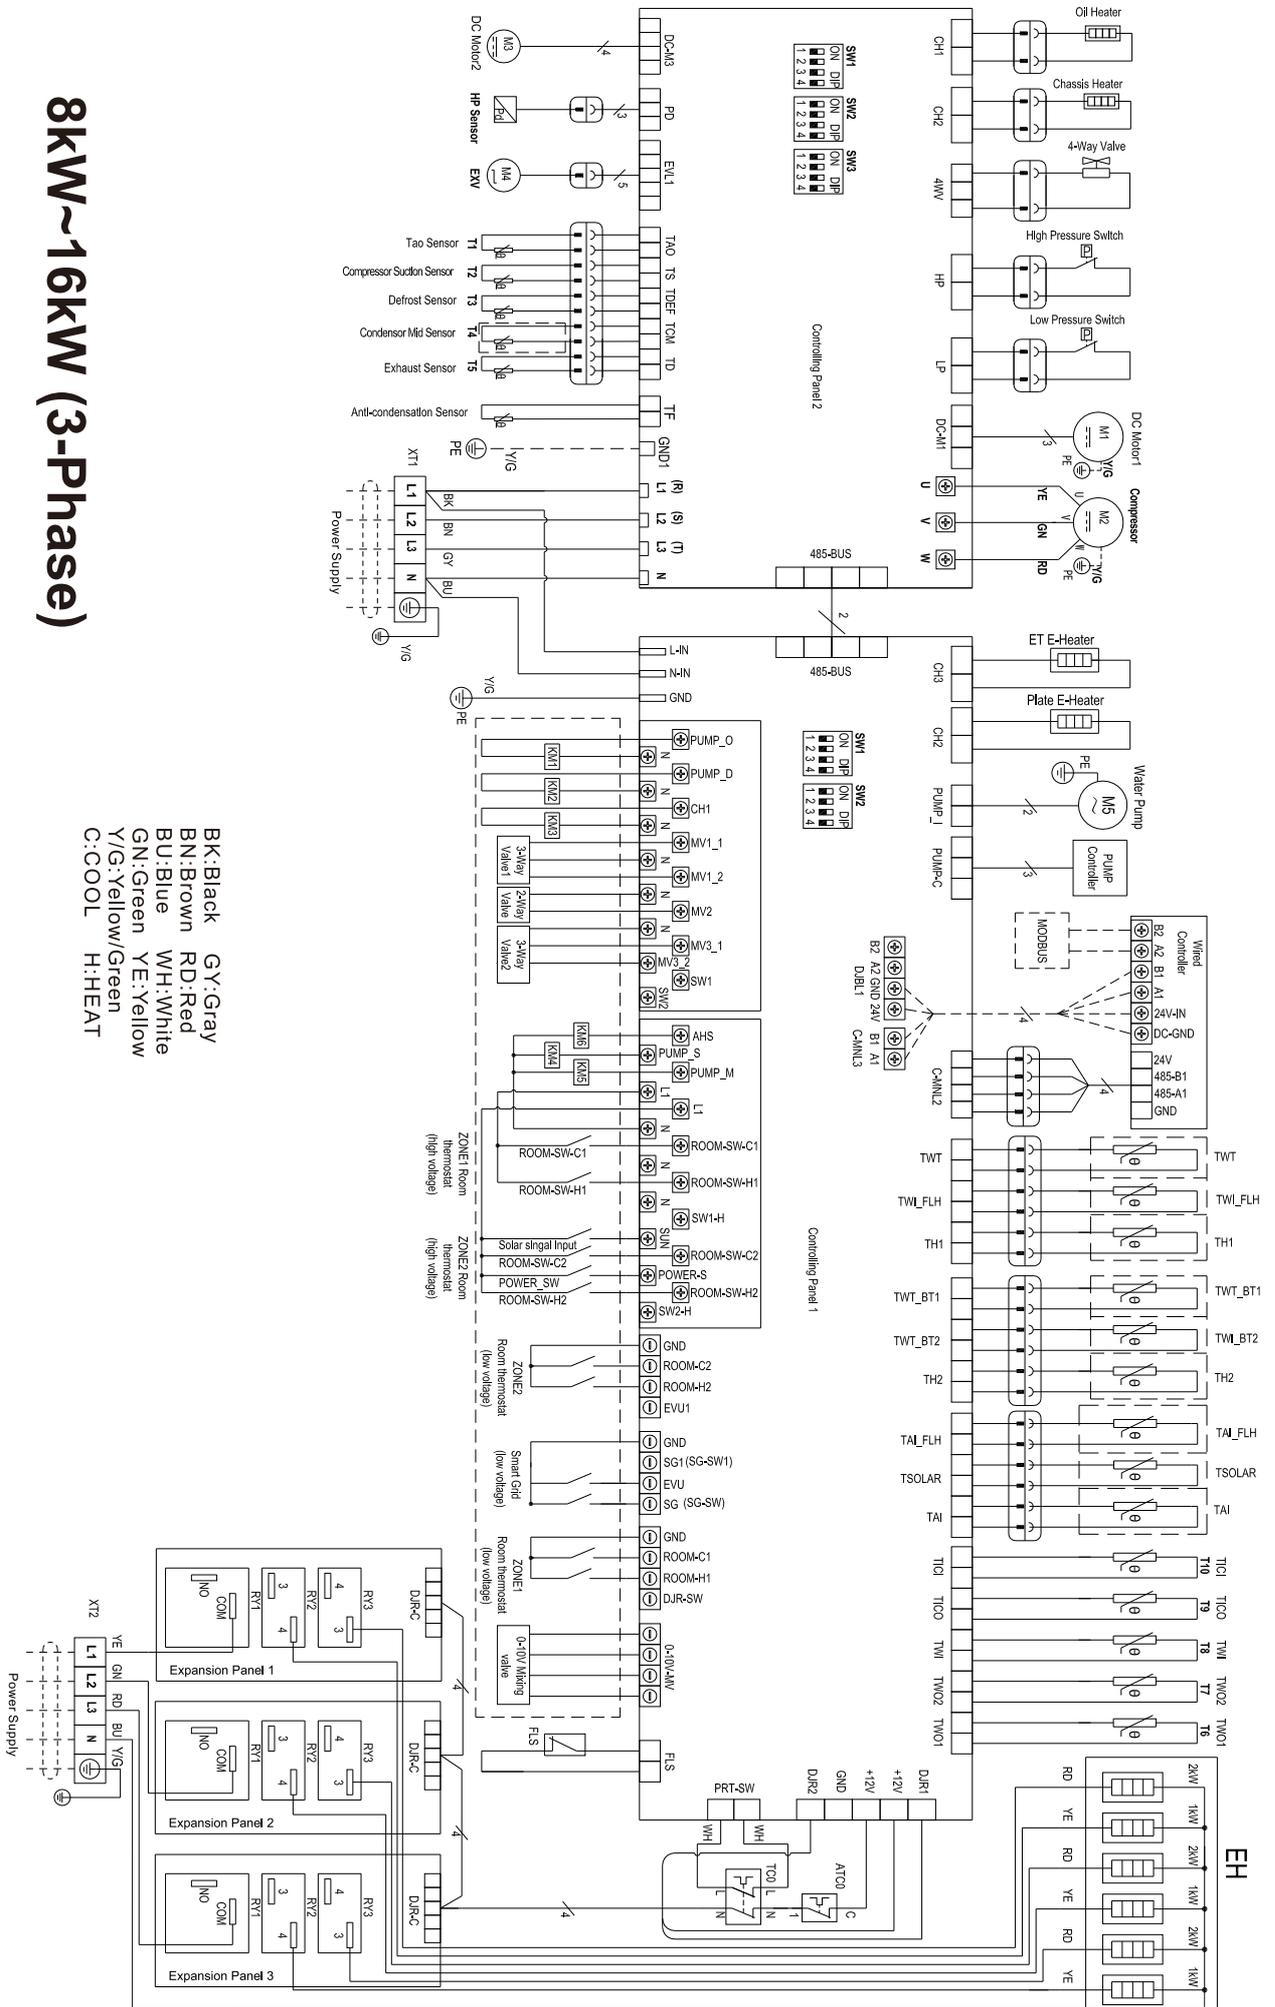


# 4KW~16KW (1-Phase)

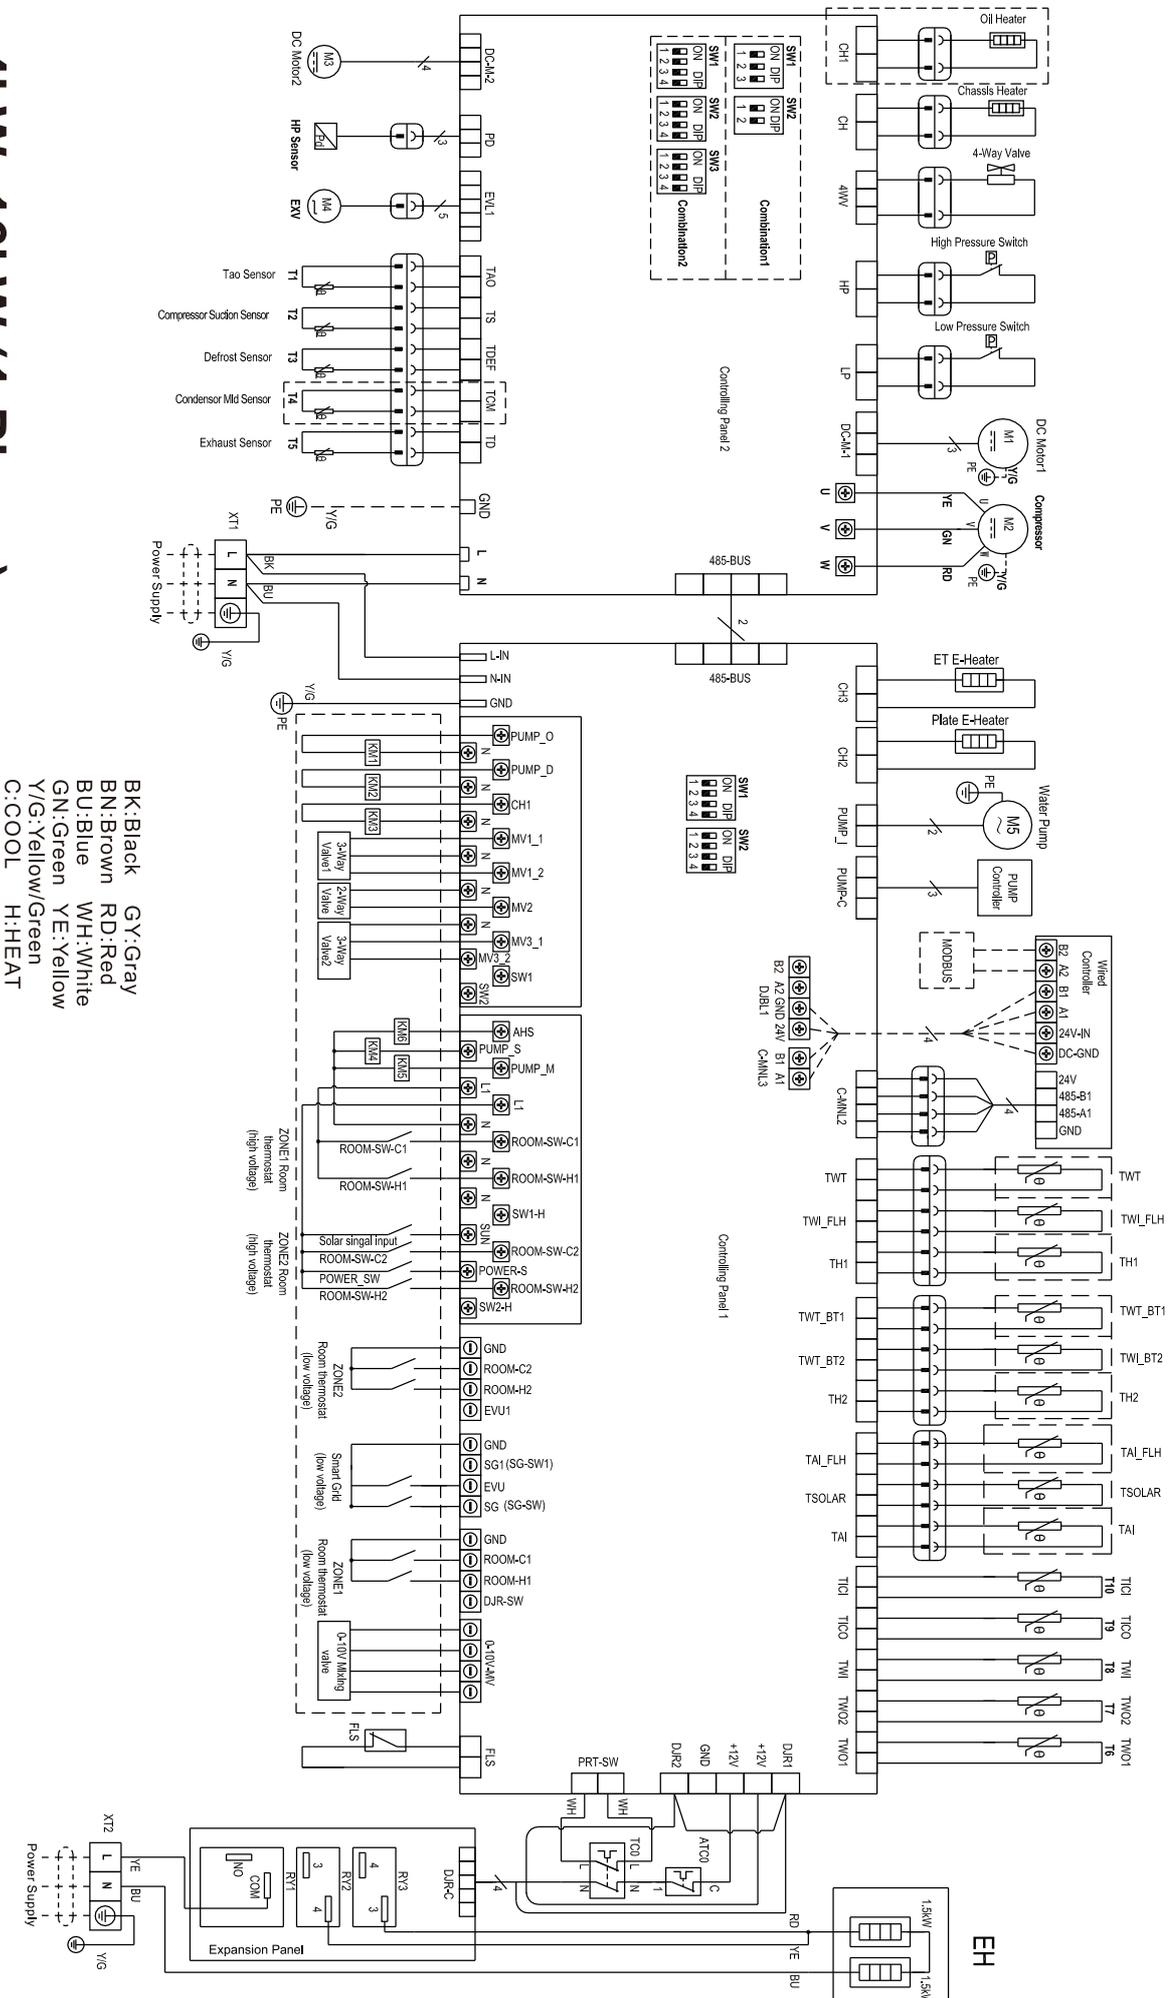

### 10.3.1 Specifications of standard wiring components

Equipment main Power Supply Wiring

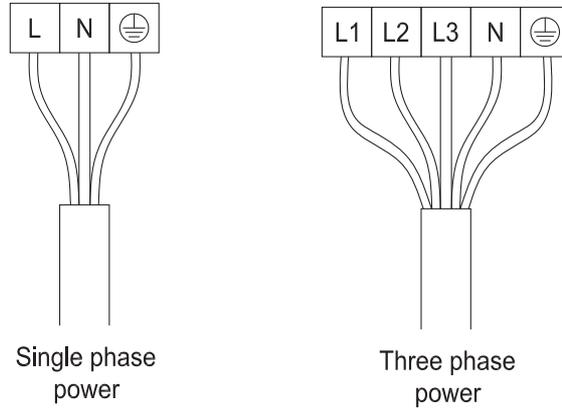


- Stated values are maximum values (see electrical data for exact values).

Unit	4kW-6kW (3kW-1PH heater)	8kW-10kW (3kW-1PH heater)	8kW-10kW (9kW-3PH heater)	12kW-16kW (3kW-1PH heater)	12kW-16kW (9kW-3PH heater)
1PH-wiring size(mm <sup>2</sup> )	4.0	4.0	/	6.0	/
3PH-wiring size(mm <sup>2</sup> )	/	/	4.0	/	4.0

#### CAUTION

When connecting to the power supply terminal, use the circular wiring terminal with the insulation casing. Use power cord that conforms to the specifications and connect the power cord firmly. To prevent the cord from being pulled out by external force, make sure it is fixed securely.

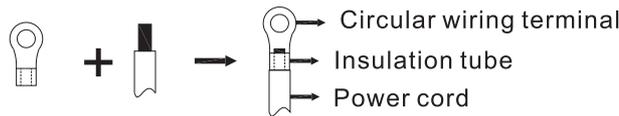


#### NOTE

The ground fault circuit interrupter must be a high-speed type breaker of 30 mA (<0.1 s). Flexible cord must meet 60245IEC(HO5VV-F) standards.

### 10.3.2 Connection for other components

Port provide the signal with 220V voltage. If the current of load is < 0.2A load can connect to the port directly. If the current of load is 0.2A, the AC contactor is required to connected for the load.

### 1) For 3-way value MV1、MV2 and MV3

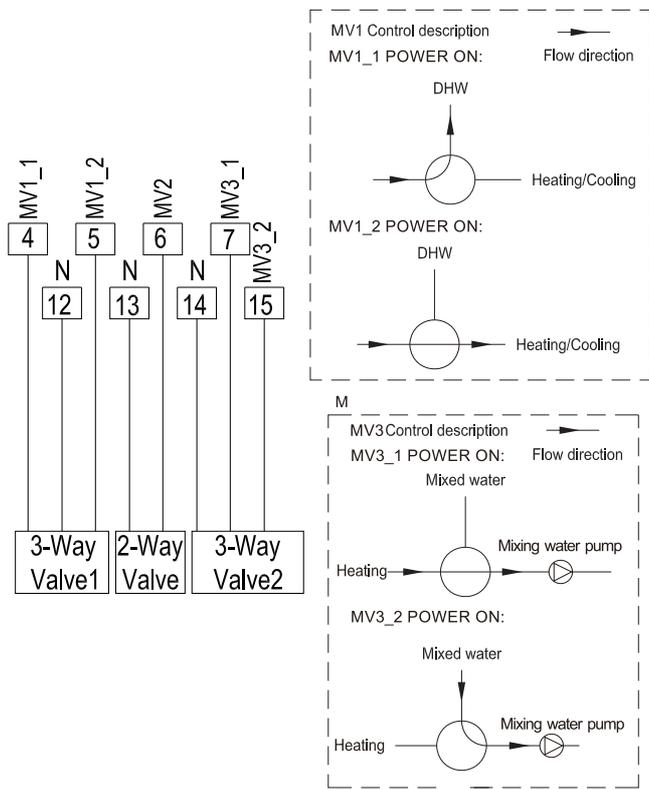


Voltage	220-240VAC
Maximum running current(A)	0.2
Wiring size(mm <sup>2</sup> )	0.75

#### a) Procedure

Connect the cable to the appropriate terminals as shown in the picture. Fix the cable reliably.

- MV1:** Motorized 3way valve
- MV2:** Two way valve
- MV3:** Mixing valve

### 2) For Zone1 pump and DHW pipe pump:

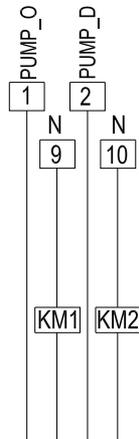


Voltage	220-240VAC
Maximum running current(A)	0.2
Wiring size(mm <sup>2</sup> )	0.75

**Zone1 pump:** External circulation pump;

**KM1:** DHW PIPE PUMP AC Contactor1  
**KM2:** Zone1 PUMP AC Contactor2


### 3) For tank booster heater:

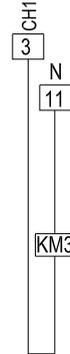

Voltage	220-240VAC
Maximum running current(A)	0.2
Wiring size(mm <sup>2</sup> )	0.75

**KM3:** Electric heating for water tank AC contactor3

### 4) For zone2 pump and additional heat source control:

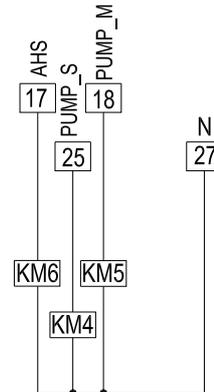

Voltage	220-240VAC
Maximum running current(A)	0.2
Wiring size(mm <sup>2</sup> )	0.75

**KM4:** Solar PUMP AC contactor4

**Zone2 pump:** Mixing valve

**KM5:** Zone 2 PUMP AC contactor5


**Additional heat source control:** AHS

**KM6:** Additional heat source AC contactor6

### WARNING

This part only applies to Basic. For Customized, cause there is an interval backup heater in the unit, the indoor unit should not be connected to any additional heat source.

### 5) For smart grid :

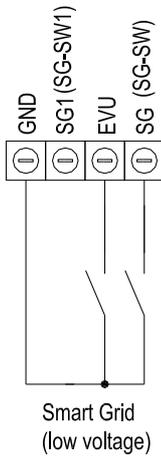


Smart Grid  
(low voltage)

The unit has smart grid function, there are two ports on PCB to connect SG signal and EVU signal as following:

1. when EVU signal is on, the unit operate as below:  
DHW mode turn on, the setting temperature will be changed to 70°C automatically, and the TBH operate as below. Twt<69. the TBH is on, Twt>70, the TBH is off.
  2. When EVU signal is off, and SG signal is on, the unit operate normally.
  3. When EVU signal is off, SG signal is off, the DHW mode is off. and the TBH is invalid, disinfect function is invalid.
- The unit operate in cooling/heating mode as the normal logic.  
The max running time for cooling/heating is "SG RUNNIN TIME", then unit will be off.


### 6) Room Thermostat(Low Voltage)

#### a) ZONE1

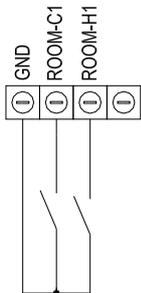


ZONE1  
Room thermostat  
(low voltage)

#### b) ZONE2

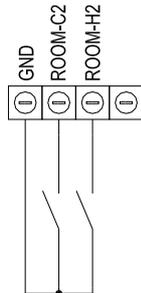

ZONE2  
Room thermostat  
(low voltage)


### 7) Room Thermostat(High Voltage)

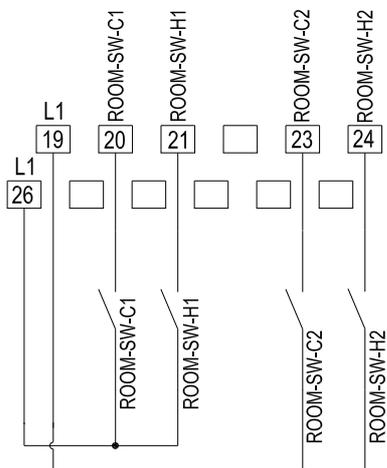


ZONE1 Room thermostat  
(high voltage)      ZONE2 Room thermostat  
(high voltage)

### 8) 0-10V Mixing valve

(Only one can be used of mixing valve and MV3)

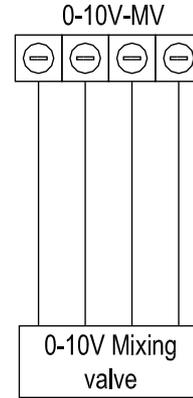


### 9) Backup power

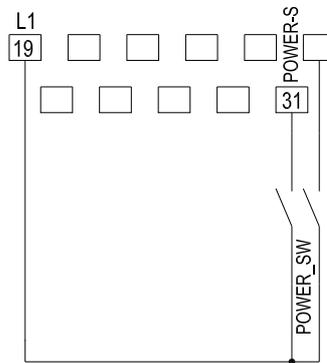

### 10) Connection mode of the wired controller when cascade are operated

(Only one can be used of DJBL1 and DJBL2)

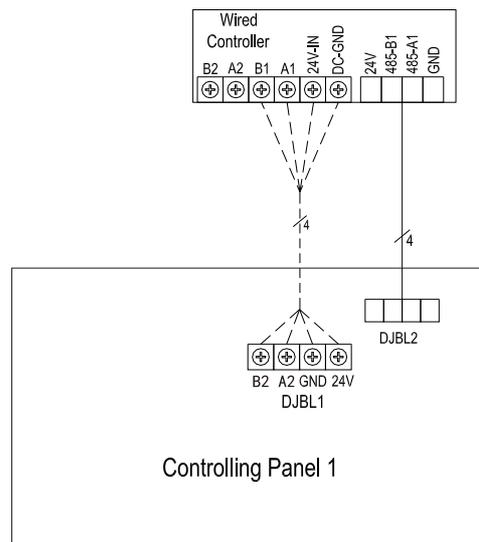

## 10.4 Water piping

All piping lengths and distances have been taken into consideration.

### NOTE

- If no glycol is in the system, in case of a power supply failure or pump operating failure, drain all the water system if the water temperature is below 0°C in the cold winter.
- When water is at standstill inside the system, freezing is very likely to happen and damage the system in the process.

### 10.4.1 Check the water circuit

- The unit is equipped with a water inlet and water outlet for connection to a water circuit.
- This circuit must be provided by a licensed technician and must comply with local laws and regulations.
- The unit is only to be used in a closed water system.
- Application in an open water circuit can lead to excessive corrosion of the water piping.
- Before continuing installation of the unit, check the following:
  - The maximum water pressure  $\leq 3$  bar.
  - The maximum water temperature  $\leq 80^\circ\text{C}$  according to safety device setting.
  - Always use materials that are compatible with the water used in the system and with the materials used in the unit.
  - Ensure that components installed in the field piping can withstand the water pressure and temperature.
  - Drain taps must be provided at all low points of the system to permit complete drainage of the circuit during maintenance.
  - Air vents must be provided at all high, points of the system. The vents should be located at points that are easily accessible for service. An automatic air purge is provided inside the unit. Check that this air purge valve is not tightened so that automatic release of air in the water circuit is possible.

### 10.4.2 Water volume and sizing expansion vessels

The units are equipped with an expansion vessel of 5L that has a default pre-pressure of 1 bar. To assure proper operation of the unit, the pre-pressure of the expansion vessel might need to be adjusted.

- 1) Check that the total water volume in the installation, excluding the internal water volume of the unit, is at least 40L. See 15 "Technical specifications" to find the total internal water volume of the unit.


### NOTE

- In most applications this minimum water volume will be satisfactory.
- In critical processes or in rooms with a high heat load though, extra water might be required.
- When circulation in each space heating loop is controlled by remotely controlled valves, it is important that this minimum water volume is kept even if all the valves are closed.

- 2) Expansion vessel volume must fit the total water system volume.

- 3) To size the expansion for the heating and cooling circuit.

The expansion vessel volume can follow the figure below.

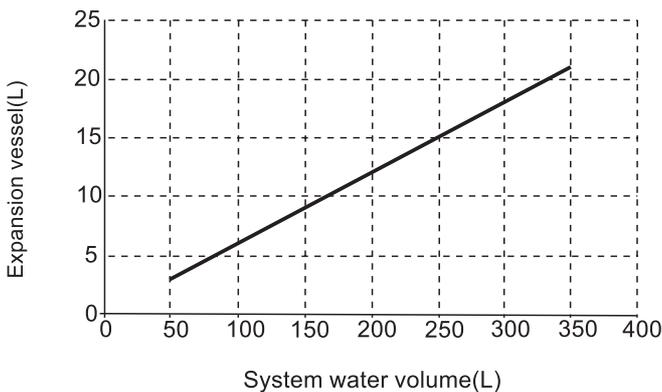

### 10.4.3 Water circuit connection

Water connections must be made correctly in accordance with respect to the water inlet and water outlet.

#### CAUTION

Be careful not to deform the unit's piping by using excessive force when connecting the piping. Deforming the piping can cause the unit to malfunction.

If air, moisture or dust gets in the water circuit, problems may occur. Therefore, always take into account the following when connecting the water circuit:

- Use clean pipes only.
- Hold the pipe end downwards when removing burrs.
- Cover the pipe end when inserting it through a wall to prevent dust and dirt entering.
- Use a good thread sealant for sealing the connections. The sealing must be able to withstand the pressures and temperatures of the system.
- When using non-copper metallic piping, be sure to insulate two kind of materials from each other to prevent galvanic corrosion.
- As copper is a soft material, use appropriate tools for connecting the water circuit. Inappropriate tools will cause damage to the pipes.

#### NOTE

The unit is only to be used in a closed water system. Application in an open water circuit can lead to excessive corrosion of the water piping:

- Never use Zn-coated parts in the water circuit. Excessive corrosion of these parts may occur as copper piping is used in the unit's internal water circuit.
- When using a 3-way valve in the water circuit. Preferably choose a ball type 3-way valve to guarantee full separation between the domestic hot water and floor heating water circuit.
- When using a 3-way valve or a 2-way valve in the water circuit. The recommended maximum changeover time of the valve should be less than 60 seconds.

### 10.4.4 Water circuit anti-freeze protection

- All internal hydronic parts are insulated to reduce heat loss. Insulation must also be added to the field piping.
- The software contains special functions using the heat pump and backup heater (if it is available) to protect the entire system against freezing. When the temperature of the water flow in the system drops to a certain value, the unit will heat the water, either using the heat pump, the electric heating tap, or the backup heater. The freeze protection function will turn off only when the temperature increases to a certain value.
- In event of a power failure, the above features would not protect the unit from freezing.

#### CAUTION

When the unit is not running for a long time make sure the unit is powered on all the time. If you want to cut off the power, the water in the system pipe needs to be drained clean, avoid the pump and pipeline system be damaged by freezing. Also the power of the unit needs to be cut off after water in the system is drained clean.

Water may enter into the flow switch and cannot be drained out and may freeze when the temperature is low enough. The flow switch should be removed and dried, then can be reinstalled in the unit.


#### NOTE

1. Counterclockwise rotation, remove the flow switch.
2. Drying the flow switch completely.

### 10.5 Filling water

- Connect the water supply to the filling valves and open the valve.
- Make sure all the automatic air purge valves are open (at least 2 turns).
- Filling with water until the manometer indicates a pressure of approximately 2.0bar. Remove air in the circuit as much as possible using the automatic air purge valves.

Do not fasten the black plastic cover on the automatic bleed valve at the top side of the unit when the system is running.  
Open the automatic bleed valve, turn counterclockwise at least 2 full turns to release air from the system.

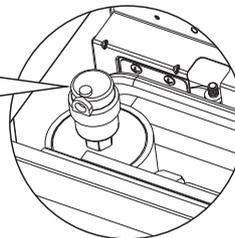

## NOTE

During filling, it might not be possible to remove all air in the system. Remaining air will be removed through the automatic bleed valve during the first operating hours of the system. Topping up the water afterwards might be required.

- The water pressure indicated on the manometer will vary depending on the water temperature (higher pressure at higher water temperature). However, at all times water pressure should remain above 0.3bar to avoid air entering the circuit.
- The unit might drain-off too much water through the pressure relief valve.
- Water quality should be complied with EN 98/83 EC Directives.
- Detailed water quality condition can be found in EN98/83 EC Directives.

## 10.6 Water piping insulation

The complete water circuit including all piping, water piping must be insulated to prevent condensation during cooling operation and reduction of the heating and cooling capacity as well as prevention of freezing of the outside water piping during winter. The insulation material should at least of B1 fire resistance rating and complies with all applicable legislation. The thickness of the sealing materials must be at least 13 mm with thermal conductivity 0.039 W/mK in order to prevent freezing on the outside water piping.

If the outdoor ambient temperature is higher than 30°C and the humidity is higher than RH 80%, then the thickness of the sealing materials should be at least 20 mm in order to avoid condensation on the surface of the seal.

## 10.7 Field wiring

### WARNING

- A main switch or other means of disconnection, having a contact separation in all poles, must be incorporated in the fixed wiring in accordance with relevant local laws and regulations. Switch off the power supply before making any connections. Use only copper wires. Never squeeze bundled cables and make sure they do not come in contact with the piping and sharp edges. Make sure no external pressure is applied to the terminal connections. All field wiring and components must be installed by a licensed electrician and must comply with relevant local laws and regulations.
- The field wiring must be carried out in accordance with the wiring diagram supplied with the unit and the instructions given below.
- Be sure to use a dedicated power supply. Never use a power supply shared by another appliance.
- Be sure to establish a ground. Do not ground the unit to a utility pipe, surge protector, or telephone ground. Incomplete grounding may cause electrical shock.
- Be sure to install a ground fault circuit interrupter(30 mA). Failure to do so may cause electrical shock.
- Be sure to install the required fuses or circuit breakers.

### 10.7.1 Precautions on electrical wiring work

- Fix cables so that cables do not make contact with the pipes (especially on the high pressure side).
- Fix the wire with cable ties so that it will not contact the pipe, especially on the high-voltage side.
- Make sure no external pressure is applied to the terminal connectors.
- When installing the ground fault circuit interrupter make sure that it is compatible with the inverter (resistant to high frequency electrical noise) to avoid unnecessary opening of the ground fault circuit interrupter.

### NOTE

- The ground fault circuit interrupter must be a high- speed type breaker of 30 mA (<0.1 s).
- This unit is equipped with an inverter. Installing, a phase advancing capacitor not only will reduce the power factor improvement effect, but also may cause abnormal heating of the capacitor due to high-frequency waves. Never install a phase advancing capacitor as it could lead to an accident.

### 10.7.2 Wiring overview

Loads requiring field wiring. Refer also to "9 typical application".

(a) Minimum cable section AWG18 (0.75mm<sup>2</sup>).

(b) The thermistor cable are delivered with the unit: if the current of the load is large, an AC contactor is needed.

### NOTE

Please use HO7RN-F for the power wire, all the cables are connect to high voltage except for thermistor cable and cable for user interface.

- Equipment must be grounded.
- All high-voltage external load, if it is metal or a grounded port, must be grounded.
- All external load current is needed less than 0.2A, if the single load current is greater than 0.2A, the load must be controlled through AC contactor.
- Plate heat exchanger E-Heating tape and Flow switch E-Heating tape share a control port.
- Field wiring guidelines.  
Most field wiring on the unit is to be made on the terminal block inside the switch box. To gain access to the terminal block, remove the switch box service panel.

## WARNING

Switch off all power including the unit power supply and backup heater and domestic hot water tank power supply (if applicable) before removing the switch box service panel.

- Fix all cables using cable ties.
- A dedicated power circuit is required for the backup heater.
- Installations equipped with a domestic hot water tank (field supply) require a dedicated power circuit for the booster heater, Please refer to the domestic hot water tank Installation & Owner's Manual.
- Lay out the electrical wiring so that the front cover does not rise up when doing wiring work and attach the front cover securely.
- Follow the electric wiring diagram for electrical wiring works (the electric wiring diagrams are located on the rear side of door 1.
- Install the wires and fix the cover firmly so that the cover may be fit in properly.

### 10.7.3 Precautions on wiring of power supply

- Use a round crimp-style terminal for connection to the power supply terminal board. In case it cannot be used due to unavoidable reasons, be sure to observe the following instructions.
  - Do not connect different gauge wires to the same power supply terminal.(Loose connections may cause overheating.)
- Use the correct screwdriver to tighten the terminal screws. Small screwdrivers can damage the screw head and prevent appropriate tightening.
- Over-tightening the terminal screws can damage the screws.
- Attach a ground fault circuit interrupter and fuse to the power supply line.
- In wiring, make certain that prescribed wires are used, carry out complete connections, and fix the wires so that outside force cannot affect the terminals.

### 10.7.4 Safety device requirements

1. Select the wire diameters (minimum value) individually for each unit based on the table below.
2. Select circuit breaker that having a contact separation in all poles not less than 3 mm providing full disconnection.

#### 1-phase 4-16kW(Backup heater:3kW) and 3-phase 8-16kW(Backup heater:9kW) standard

System	Power Current						WPM	
	Hz	Voltage(V)	Min(V)	Max(V)	MCA(A)	MHA(A)	kW	FLA(A)
4-6kW	50	220-240/1N	198	264	27	15	0.095	0.75
8-10kW	50	220-240/1N	198	264	30	15	0.095	0.75
8-10kW 3-PH	50	380-415/3N	342	456	10	15	0.095	0.75
12-16kW	50	220-240/1N	198	264	44	15	0.095	0.75
12-16kW 3-PH	50	380-415/3N	342	456	15	15	0.095	0.75

#### 1-phase 4-16kW standard without backup heater

System	Power Current						WPM	
	Hz	Voltage(V)	Min(V)	Max(V)	MCA(A)	MHA(A)	kW	FLA(A)
4-6kW	50	220-240/1N	198	264	27	/	0.095	0.75
8-10kW	50	220-240/1N	198	264	30	/	0.095	0.75
12-16kW	50	220-240/1N	198	264	44	/	0.095	0.75

## NOTE

MCA: Max. Compressor Amps.(A)  
 MHA: MAX. Heater Amps.(A)  
 WPM: Water Pump Motor  
 FLA: Full Load Amps.(A)

- A creepage circuit breaker above the maximum current must be installed to avoid possible electric shocks.

## 11. START-UP AND CONFIGURATION

The unit should be configured by the installer to match the installation environment (outdoor climate, installed options, etc.) and user expertise.

### CAUTION

It is important that all information in this chapter is read sequentially by the installer and that the system is configured as applicable.

### 11.1 Initial start-up at low outdoor ambient temperature

During initial start-up and when water temperature is low, it is important that the water is heated gradually. Failure to do so may result in concrete floors cracking due to rapid temperature change. Please contact the responsible cast concrete building contractor for further details.

To do so, the lowest water flow set temperature can be decreased to a value between 25°C and 35°C by adjusting the FOSERVICEMAN.

### 11.2 Pre-operation checks

Checks before initial start-up.

### DANGER

Switch of the power supply before making any connections.

After the installation of the unit, check the following before switching on the circuit breaker;

- Field wiring: Make sure that the field wiring between the local supply panel and unit and valves (when applicable), unit and room thermostat (when applicable), unit and domestic hot water tank, and unit and backup heater kit have been connected according to the instructions described in the chapter 10.7 "Field wiring", according to the wiring diagrams and to local laws and regulations.
- Fuses, circuit breakers, or protection devices: Check that the fuses or the locally installed protection devices are of the size and type specified in 15 "Technical specifications". Make sure that no fuses or protection devices have been bypassed.
- Backup heater circuit breaker: Do not forget to turn on the backup heater circuit breaker in the switchbox (it depends on the backup heater type). Refer to the wiring diagram.
- Booster heater circuit breaker: Do not forget to turn on the booster heater circuit breaker (applies only to units with optional domestic hot water tank installed).
- Ground wiring: Make sure that the ground wires have been connected properly and that the ground terminals are tightened.
- Internal wiring: Visually check the switch box for loose connections or damaged electrical components.
- Mounting: Check that the unit is properly mounted, to avoid abnormal noises and vibrations when starting up the unit.
- Damaged equipment: Check the inside of the unit for damaged components or squeezed pipes.
- Refrigerant leak: Check the inside of the unit for refrigerant leakage. If there is a refrigerant leak, call your local dealer.
- Power supply voltage: Check the power supply voltage on the local supply panel. The voltage must correspond to the voltage on the identification label of the unit.
- Air purge valve: Make sure the air purge valve is open (at least 2 turns).
- Shut-off valves: Make sure that the shut-off valves are fully open.

## 12. TEST RUN AND FINAL CHECKS

The installer is obliged to verify correct operation of unit after installation.

### 12.1 Final checks

Before switching on the unit, read following recommendations:

- When the complete installation and all necessary setting have been carried out, close all front panels of the unit and refit the unit cover.
- The service panel of the switch box may only be opened by a licensed electrician for maintenance purpose.

#### Note:

At during the first running period of the unit, required power input may be higher than stated on the nameplate of the unit. This phenomenon originates from the compressor that needs elapse of a 50 hours run in period before reaching smooth operation and stable power consumption.

### 12.2 Test run operation (manually)

If required, the installer can perform a manual test run operation at any time to check correct operation of air purge, heating, cooling and domestic water heating.

## 13. MAINTENANCE AND SERVICE

In order to ensure optimal availability of the unit, a number of checks and inspections on the unit and the filed wiring have to be carried out at regular intervals.

This maintenance needs to be carried out by your local technician.

In order to ensure optimal availability of the unit, a number of checks and inspections on the unit and the field wiring have to be carried out at regular intervals.

This maintenance has to be carried out by your local technician.

### DANGER

#### Electric Shock

- Before carrying out any maintenance or repairing activity, must switch off the power supply on the supply panel.
- Do not touch any live part for 10 minutes after the power supply is turned off.
- The crank heater of compressor may operate even in standby.
- Please note that some sections of the electric component box are hot.
- Forbid touch any conductive parts.
- Forbid rinse the unit. It may cause electric shock or fire.  
Forbid leave the unit unattended when service panel is removed.

The following checks must be performed at least once a year by qualified person:

- Water pressure  
Check the water pressure, if it is below 1 bar, fill water to the system.
- Water filter  
Clean the water filter.
- Water pressure relief valve  
Check for correct operation of the pressure relief valve by turning the black knob on the valve counter-clockwise:  
-If you do not hear a clacking sound, contact your dealer.  
-In case the water keeps running out of the unit, close both the water inlet and outlet shut-off valves first and then contact your local dealer.
- Pressure relief valve hose  
Check that the pressure relief valve hose is positioned appropriately to drain the water.
- Backup heater vessel insulation cover  
Check that the backup heater insulation cover is fastened tightly around the backup heater vessel.
- Domestic hot water tank pressure relief valve (filled supply) Applies only to installation with a domestic hot water tank.  
Check for correct operation of the pressure relief valve on the domestic hot water tank.
- Domestic hot water tank booster heater  
Applies only to installations with a domestic hot water tank. It is advisable to remove lime buildup on the booster heater to extend its life span, especially in regions with hard water. To do so, drain the domestic hot water tank, remove the booster heater from the domestic hot water tank and immerse in a bucket (or similar) with lime-removing product for 24 hours.
- Unit switch box  
-Carry out a thorough visual inspection of the switch box and look for obvious defects such as loose connections or defective wiring.  
-Check for correct operation of contactors with an ohm meter, All contacts of these contactors must be in open position.  
Use of glycol (Refer to 10.4.4 "Water circuit anti-freeze protection") Document the glycol concentration and the pH-value in the system at least once a year.  
-A PH-value below 8.0 indicates that a significant portion of the inhibitor has been depleted and that more inhibitor needs to be added.  
-When the PH-value is below 7.0 then oxidation of the glycol occurred, the system should be drained and flushed thoroughly before severe damage occurs.  
Make sure that the disposal of the glycol solution is done in accordance with relevant local laws and regulations.

## 14. TROUBLE SHOOTING

This section provides useful information for diagnosing and correcting certain troubles which may occur in the unit. This troubleshooting and related corrective actions may only be carried out by your local technician.

### 14.1 General guidelines

Before starting the troubleshooting procedure, carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

#### WARNING

- When carrying out an inspection on the switch box of the unit, always make sure that the main switch of the unit is switched off.
- When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. Under on circumstance can safety devices be bridged or changed to a valve other than the factory setting. If the cause of the problem cannot be found, call your local dealer.
- If the pressure relief valve is not working correctly and is to be replaced, always reconnect the flexible hose attached to the pressure relief valve to avoid dripping out of the unit!

Note: For problems related to the optional solar kit for domestic water heating, refer to the troubleshooting in the Installation and owner's manual for that kit.

### 14.2 General Symptoms

Symptom 1: The unit is turned on but the unit is not heating or cooling as expected

Possible Causes	Corrective Action
The temperature setting is not correct.	Check the parameters.Tao_HMAX,Tao_HMIN in heat mode. Tao_CMAX,Tao_CMIN in cool mode.Tao_DHWMAX, Tao_DHWMIN in DHW mode.
The water flow is too low.	<ul style="list-style-type: none"> <li>● Check that all shut off valves of the water circuit are in the right osition.</li> <li>● Check the water filter is plugged.</li> <li>● Make sure there is no air in the water system.</li> <li>● Check on the manometer that there is sufficient water pressure. The water pressure must be &gt;1 bar(water is cold).</li> <li>● Make sure that the expansion vessel is not too high for the pump.</li> </ul>
The water volume in the installation is too low.	Make sure the water volume in the installation is above the minimum required value(refer to “10.4.2Water volume and sizing expansion vessels”)

Symptom 2: The unit is turned on but the compressor is not starting(space heating or domestic water heating)

Possible Causes	Corrective Action
The unit maybe operate out of its operation range (the water temperature is too low).	In case of low water temperature, the system utilizes the backup heater to reach the minimum water temperature first(18°C). <ul style="list-style-type: none"> <li>● Check that the backup heater power supply is correct.</li> <li>● Check that the backup heater thermal fuse is closed.</li> <li>● Check that the backup heater thermal protector is not activated.</li> <li>● Check that the backup heater thermal contactors are not broken.</li> </ul>

Symptom 3: Pump is making noise(cavitation)

Possible Causes	Corrective Action
There is air in the system.	Purge air.
Water pressure at pump inlet is too low.	<ul style="list-style-type: none"> <li>● Check on the manometer that there is sufficient water pressure. The water pressure must be &gt;1bar(water is cold).</li> <li>● Check that the manometer is not broken.</li> <li>● Check that the expansion vessel is not broken.</li> <li>● Check that the setting of the pre-pressure of the expansion vessel is correct (refer to “10.4.2Water volume and seizing expansion vessels”).</li> </ul>

Symptom 4: The water pressure relief valve opens

Possible Causes	Corrective Action
The expansion vessel is broken.	Replace the expansion vessel.
The filling water pressure in the installation is higher than 0.3MPa.	Make sure that the filling water pressure in the installation is about 0.1 ~ 0.2MPa(refer to “10.4.2Water volume and sizing expansion vessels”).

Symptom 5: The water pressure relief valve leaks

Possible Causes	Corrective Action
Dirt is blocking the water pressure relief valve outlet.	<p>Check for correct operation of the pressure relief valve by turning the red knob on the valve counter clockwise:</p> <ul style="list-style-type: none"> <li>● If you do not hear a clacking sound, contact your local dealer.</li> <li>● In case the water keeps running out of the unit, close both the water inlet and outlet shut-off valves first and then contact your local dealer.</li> </ul>

Symptom 6: Space heating capacity shortage at low outdoor temperatures

Possible Causes	Corrective Action
Backup heater operation is not activated.	<p>Check that the "OTHER HEATING SOURCE/BACKUP HEATER" is enable, see "<b>Wired Controller Instruction</b>" Check whether or not the thermal protector of the backup heater has been activated(refer to "Controls parts for backup heater(IBH)").</p> <p>Check if booster heater is running, the backup heater and booster heater can't operate simultaneously.</p>
Too much heat pump capacity is used for heating domestic hot water (applies only to installations with a domestic hot water tank).	<p>Check that the "t_DHWHP_MAX" and "t_DHWHP_RESTRICT" are configured appropriately:</p> <ul style="list-style-type: none"> <li>● Make sure that the "DHW PRIORITY" in the user interface is disabled.</li> <li>● Enable the "Tao_TBH_ON" in the user interface/FOR SERVICEMAN to active the booster heater for domestic water heating.</li> </ul>

Symptom 7: Heat mode can't change to DHW mode immediately

Possible Causes	Corrective Action
There is air in the system.	Purge air.
Volume of tank is too small and the location of water temperature probe not high enough	<ul style="list-style-type: none"> <li>● Set "t-DHWHP_RESTRICT" to minimum value.</li> <li>● Enable TBH, and TBH should be controlled by the outdoor unit.</li> <li>● If AHS is available, turn on first, if requirement for turn heat pump on is fulfilled, the heat pump will turn on.</li> <li>● If both TBH and AHS are not available, try to change the position of TWT probe(refer to 2 "General introduction").</li> </ul>

Symptom 8: DHW mode can't change to Heat mode immediately.

Possible Causes	Corrective Action
Heat exchange for space heating not big enough	<ul style="list-style-type: none"> <li>● Set "t_DHWHP_MAX" to minimum value, the suggested value is 60min.</li> <li>● If circulating pump out of unit is not controlled by unit, try to connect it to the unit.</li> <li>● Add 3-way valve at the inlet of fan coil to ensure enough water flow.</li> </ul>
Space heating load is small	Normal, no need for heating
Disinfect function is enabled but without TBH	<ul style="list-style-type: none"> <li>● Disable disinfect function</li> <li>● Add TBH or AHS for DHW mode</li> </ul>
Manual turn on the FAST WATER function, after the hot water meets the requirements, the heat pump fails to switch to the air-conditioning mode in time when the air conditioner is in demand	Manual turn off the FAST WATER Add TBH or AHS for DHW mode
When the ambient temperature is low, the hot water is not enough and the AHS is not operated or operated late	<ul style="list-style-type: none"> <li>● Set "Tao_DHWMIN", the suggested value is <math>\geq -5^{\circ}\text{C}</math></li> <li>● Set "Tao_TBH_ON", the suggested value is <math>\geq 5^{\circ}\text{C}</math></li> </ul>
DHW mode priority	If there is AHS or IBH connect to the unit, when the outdoor unit failed, the indoor unit must run DHW mode till the water temperature reach the setting temperature before change to heating mode.

Symptom 9: DHW mode heat pump stop work but setpoint not reached, space heating require heat but unit stay in DHW mode

Possible Causes	Corrective Action
Surface of coil in the tank not large enough	The same solution for Symptom 7
TBH or AHS not available	Heat pump will stay in DHW mode until "t_DHWHP_MAX" reached or setpoint. Add TBH or AHS for DHW mode, TBH and AHS should be controlled by the unit

### 14.3 Error codes

When a safety device is activated, an error code will be displayed on the user interface.

A list of all errors and corrective actions can be found in the table below.

Reset the safety by turning the unit OFF and back ON.

In case this procedure for resetting the safety is not successful, contact your local dealer.

ERROR CODE	MALFUNCTION OR PROTECTION	FAILURE CAUSE AND CORRECTIVE ACTION
A7	Water flow falut	<ol style="list-style-type: none"> <li>1.The wire circuit is short connected or open. Reconnect the Wire correctly.</li> <li>2.Water flow rate is too low.</li> <li>3. Water flow switch is failed, switch is open or close continuously, change the water flow switch.</li> </ol>
AA	Communication fault between controller and indoor unit	<ol style="list-style-type: none"> <li>1.Wire doesn't connect between wired controller and unit. connect the wire.</li> <li>2.Communication wire sequence is not right. Reconnect the Communication fault wire in the right sequence. between controller.</li> <li>3.Whether there is a high magnetic field or high power and indoor unit interfere, such as lifts, large power transformers, etc..</li> </ol> <p>To add a barrier to protect the unit or to move the unit to the other place.</p>
93	Final outlet water temp.sensor(TWO2) fault	<ol style="list-style-type: none"> <li>1.Check the resistance of the sensor.</li> <li>2.The TWO2 sensor connector is loosen. Reconnect it.</li> <li>3.The TWO2 sensor connector is wet or there is water in. remove the water, make the connector dry. Add waterproof adhesive.</li> <li>4.The TWO2 sensor failure, change a new sensor.</li> </ol>
96	Water tank temp. sensor(TWT)fault	<ol style="list-style-type: none"> <li>1.Check the resistance of the sensor.</li> <li>2.The TWTsensor connector is loosen. Reconnect it.</li> <li>3.The TWT sensor connector is wet or there is water in. remove the water, make the connector dry. Add waterproof adhesive</li> <li>4.The TWT sensor failure, change a new sensor.</li> </ol>
94	Inlet water temp. sensor(TWI)malfuncti on	<ol style="list-style-type: none"> <li>1. Check the resistance of the sensor.</li> <li>2. The TWI sensor connector is loosen. Re connect it. Inlet water temp.sensor</li> <li>3.The TWI sensor connector is wet or there is water in. (TWI) malfunction remove the water, make the connector dry. Add waterproof adhesive</li> <li>4. The TWI sensor failure, change a new sensor.</li> </ol>
A9	Communication fault between indoor unit and outdoor unit	<ol style="list-style-type: none"> <li>1.wire doesn't connect between outdoor unit and main controll board of indoor unit. connect the wire.</li> <li>2.Communication wire sequence is not right. Reconnect the wire in the right sequence.</li> <li>3. Whether there is a high magnetic field or high power interfere, such as lifts, large power transformers, etc.. To add a barrier to protect the unit or to move the unit to the other place.</li> </ol>
A3	Refrigerant liquid temp.sensor(TICI) fault	<ol style="list-style-type: none"> <li>1.Check the resistance of the sensor.</li> <li>2.The TICI sensor connector is loosen. Re connect it.</li> <li>3.The TICI sensor connector is wet or there is water in. remove the water, make the connector dry. Add waterproof adhesive</li> <li>4. The TICI sensor failure, change a new sensor.</li> </ol>
A4	Refrigerant gas temp.sensor(TICO) fault	<ol style="list-style-type: none"> <li>1.Check the resistance of the sensor.</li> <li>2. The TICO sensor connector is loosen. Reconnect it.</li> <li>3.The TICO sensor connector is wet or there is water in. remove the water, make the connector dry. Add waterproof adhesive.</li> <li>4. The TICO sensor failure, change a new sensor.</li> </ol>
95	Outlet water temp.sensor(TWO1) fault	<ol style="list-style-type: none"> <li>1. The TWO1 sensor connector is loosen. Reconnect it.</li> <li>2.The TWO1 sensor connector is wet or there is water in. remove the water, make the connector dry. add waterproof adhesive.</li> <li>3. The TWO1 sensor failure, change a new sensor.</li> </ol>
7F	Solar temp.sensor(Tsolar) fault	<ol style="list-style-type: none"> <li>1.Check the resistance of the sensor.</li> <li>2.The Tsolar sensor connector is loosen, reconnect it.</li> <li>3.The Tsolar sensor connector is wet or there is water in, remove the water ,make the connector dry. Add waterproof adhesive.</li> <li>4.The Tsolar sensor failure,change a new sensor.</li> </ol>

ERROR CODE	MALFUNCTION OR PROTECTION	FAILURE CAUSE AND CORRECTIVE ACTION
7E	Floor heating water inlet temp. sensor (TWI_FLH)	1.Check the resistance of the sensor. 2.The TWI_FLH sensor connector is loosen, reconnect it. 3.The TWI_FLH sensor connector is wet or there is water in, remove the water ,make the connector dry. Add waterproof adhesive. 4.The TWI_FLH sensor failure, change a new sensor.
A5	IDU water pump fault	1.Check whether the water valve is open 2.Check whether the water pump control line is loose 3.Check whether the filter is dirty and blocked 4. Check whether the pump voltage is lower than 170V or higher than 270V 5.The water pump failure, change a new water pump
98	Early closing fault of water flow switch	1. Check whether the wiring of water flow switch is correct 2. Check whether other equipment is connected in series with the host 3. Water flow switch failure, change a new water flow switch
97	Anti-freezing Low Pressure Switch (AFLP) protection	1. Check whether AFLP is loose 2. Check whether there is insufficient refrigerant 3. Check whether the filter is dirty and blocked 4. The AFLP failure,change a new AFLP
AF	Electric heating overheat protection	1. Check whether the filter is dirty and blocked 2.Check whether the thermal protection switch falls off
7D	Expansion Board Comm fault.	Check whether the connection line is normal
A8	EE fault	1.check whether the internal and external connecting lines are connected normally 2.The control panel failure,change a new control panel

Code display	Failure
36	Invter OVV or UNDV protect
35	Invter OVC protect
H4	Low PRESS switch protect
H1	High PRESS switch protect
39	Invter high temp protect
C1	ODU Ambient temp sensor fault
C6	Suction temp sensor fault
E3	DISC temp too high protect
FH	Low DISC temp protect
E1	Four-way valve cur fault
C2	Defrosting temp sensor fault
3H	Invter fault start or out of step
J7	EEPROM fault
C3	DISC temp sensor fault
J2	ODU Comm fault with IDUs
3E	Invter ACC protect
3F	Invter PFC protect
31	Invter IPM protect
J3	Comm fault between main PCBCOMP Invter
J4	Comm fault between main PCB and Fan Invter
32	Invter hardware protect
37	Invter temp sensor fault
33	Invter software protect
F1	DISC PRESS sensor fault
F3	DISC PRESS too high protect
J5	Wrong ODU quantity setting and address setting

### CAUTION

In winter, if the unit has failure and the unit is not repaired in time, the water pump and pipeline system may be damaged by freezing, so failure must be repaired in time.

## 15. TECHNICAL SPECIFICATIONS

### 15.1 General

Model	1-phase	1-phase	3-phase	1-phase	3-phase
	4/6 kW	8/10 kW	8/10 kW	12/14/16 kW	12/14/16 kW
Nominal	Refer to the Technical Data				
Dimensions (H×W×D)[mm]	710×1130×420	1040×1280×420	1040×1280×420	1040×1280×420	1040×1280×420
Packing Dimensions (H×W×D)[mm]	870×1205×555	1210×1355×545	1210×1355×545	1210×1355×545	1210×1355×545
Weight (with backup heater)					
Net weight(kg)	93	138	140	152	154
Gross weight(kg)	104	151	153	165	167
Connections					
water inlet/outlet	G1"BSP	G1"BSP	G1"BSP	G1"BSP	G1"BSP
Expansion vessel					
volume	5L				
Maximum working pressure(MWP)	3 bar				
Pump					
Type	Water cooled	Water cooled	Water cooled	Water cooled	Water cooled
No. of speed	Variable speed	Variable speed	Variable speed	Variable speed	Variable speed
Pressure relief valve water circuit	3 bar				
Operation range - water side					
heating(°C)	+25~+80				
cooling(°C)	+5~+25				
Domestic hot water(°C)	+30~+75				
Operation range - air side					
heating(°C)	-25~+35				
cooling(°C)	-5~+43				
domestic hot water by heat pump(°C)	-25~+43				

### 15.2 Electrical specifications

Model		1-phase 4/6/8/10/12/14/16kW	3 - phase 8/10/12/14/16kW
Standard unit	Power Supply	220-240V~ 50Hz	380 - 415V 3N-50Hz
	Nominal Running Current	See "10.7.4 Safety device requirement"	
Backup heater	Power Supply	See "10.7.4 Safety device requirement"	
	Nominal Running Current	See "10.7.4 Safety device requirement"	

## 16. MAINTENANCE NOTICE

### Attention:

- For maintenance or scrap, please contact authorized service centers.
- Maintenance by unqualified person may cause dangers.
- Feed air conditioner with R290 refrigerant, and maintain the air conditioner in strictly accordance with manufacturer's requirements.
- The refrigerant may mix with air to form a flammable atmosphere. There is a risk of fire and explosion.
- The chapter is mainly focused on special maintenance requirements for appliance with R290 refrigerant.
- Ask repairer to read after-sales technical service handbook for detailed information.

### Qualification requirements of maintenance personnel

- 1.Special training additional to usual refrigerating equipment repair procedures is required when equipment with flammable refrigerants is affected. In many countries, this training is carried out by national training organisations that are accredited to teach the relevant national competency standards that may be set in legislation. The achieved competence should be documented by a certificate.
- 2.The maintenance and repair of the air conditioner must be conducted according to the method recommended by the manufacturer. If other professionals are needed to help maintain and repair the equipment, it should be conducted under the supervision of individuals who have the qualification to repair AC equipped with flammable refrigerant.
- 3.Wear suitable personal protective equipment and bring a fire extinguisher with you.

### Inspection of the Site

- Safety inspection must be taken before maintaining equipment with R290 refrigerant to make sure the risk of fire is minimized. Check whether the place is well ventilated, whether anti-static and fire prevention equipment is perfect.
- While maintaining the refrigeration system, observe the following precautions before operating the system.
- Note that the refrigerant R290 must never be introduced into the sewage system.

### Operating Procedures

- 1.General work area:  
All maintenance staff and others working in the local area shall be instructed on the nature of work being carried out. Work in confined spaces shall be avoided. The area around the workspace shall be sectioned off. Ensure that the conditions within the area have been made safe by control of flammable material.
- 2.Checking for presence of refrigerant:  
The area shall be checked with an appropriate refrigerant detector prior to and during work, to ensure the technician is aware of potentially toxic or flammable atmospheres. Ensure that the leak detection equipment being used is suitable for use with all applicable refrigerants, i.e. no-sparking, adequately sealed or intrinsically safe.
- 3.Presence of fire extinguisher:  
If any hot work is to be conducted on the refrigeration equipment or any associated parts, appropriate fire extinguishing equipment shall be available to hand. Have a dry powder or CO<sub>2</sub> fire extinguisher adjacent to the charging area.
- 4.No ignition sources:  
No person carrying out work in relation to a refrigeration system which involves exposing any pipe work shall use any sources of ignition in such a manner that it may lead to the risk of fire or explosion. All possible ignition sources, including cigarette smoking, should be kept sufficiently far away from the site of installation, repairing, removing and disposal, during which refrigerant can possibly be released to the surrounding space. Prior to work taking place, the area around the equipment is to be surveyed to make sure that there are no flammable hazards or ignition risks. No Smoking signs shall be displayed.
- 5.Ventilated Area(open the door and window):  
Ensure that the area is in the open or that it is adequately ventilated before breaking into the system or conducting any hot work. A degree of ventilation shall continue during the period that the work is carried out. The ventilation should safely disperse any released refrigerant and preferably expel it externally into the atmosphere.
- 6 Checks to the refrigeration equipment:  
Where electrical components are being changed, they shall be fit for the purpose and to the correct specification. At all times the manufacturer's maintenance and service guidelines shall be followed. If in doubt, consult the manufacturer's technical department for assistance. The following checks shall be applied to installations using flammable refrigerants:
  - The charge size is in accordance with the room size within which the refrigerant containing parts are installed.
  - The ventilation machinery and outlets are operating adequately and are not obstructed.
  - If an indirect refrigerating circuit is being used, the secondary circuit shall be checked for the presence of refrigerant.
  - Refrigeration pipe or components are installed in a position where they are unlikely to be exposed to any substance which may corrode refrigerant containing components, unless the components are constructed of materials which are inherently resistant to being corroded or are suitably protected against being so corroded.
- 7.Checks to electrical devices:  
Repair and maintenance to electrical components shall include initial safety checks and component inspection procedures. If a fault exists that could compromise safety, then no electrical supply shall be connected to the circuit until it is satisfactorily dealt with. If the fault cannot be corrected immediately but it is necessary to continue operation, an adequate temporary solution shall be used. This shall be reported to the owner of the equipment so all parties are advised. Initial safety checks shall include:
  - That capacitors are discharged: this shall be done in a safe manner to avoid possibility of sparking.
  - That no live electrical components and wiring are exposed while charging, recovering or purging the system.
  - Keep continuity of earthing.

## Inspection of Cable

Check the cable for wear, corrosion, overvoltage, vibration and check if there are sharp edges and other adverse effects in the surrounding environment. During the inspection, the impact of aging or the continuous vibration of the compressor and the fan on it should be taken into consideration.

## Leakage check of R290 refrigerant

- Note: Check the leakage of the refrigerant in an environment where there is no potential ignition source. No halogen probe (or any other detector that uses an open flame) should be used.
- Leak detection method:
  - For systems with refrigerant R290, electronic leak detection instrument is available to detect and leak detection should not be conducted in environment with refrigerant. Make sure the leak detector will not become a potential source of ignition, and is applicable to the measured refrigerant.
  - Leak detector shall be set for the minimum ignitable fuel concentration (percentage) of the refrigerant. Calibrate and adjust to proper gas concentration (no more than 25%) with the used refrigerant.
  - The fluid used in leak detection is applicable to most refrigerants. But do not use chloride solvents to prevent the reaction between chlorine and refrigerants and the corrosion of copper pipeline.
  - If you suspect a leak, then remove all the fire from the scene or put out the fire.
  - If the location of the leak needs to be welded, then all refrigerants need to be recovered, or isolate all refrigerants away from the leak site (using cut-off valve). Before and during the welding, use OFN to purify the entire system.

## Removal and Vacuum Pumping

1. Make sure there is no ignited fire source near the outlet of the vacuum pump and the ventilation is well.
2. Allow the maintenance and other operations of the refrigeration circuit should be carried out according to the general procedure, but the following best operations that the flammability is already taken into consideration are the key. You should follow the following procedures:
  - Remove the refrigerant.
  - Decontaminate the pipeline by inert gases.
  - Evacuation.
  - Decontaminate the pipeline by inert gases again.
  - Cut or weld the pipeline.
3. The refrigerant should be returned to the appropriate storage tank. The system should be blown with oxygen free nitrogen to ensure safety. This process may need to be repeated for several times. This operation shall not be carried out using compressed air or oxygen.
4. Through blowing process, the system is charged into the anaerobic nitrogen to reach the working pressure under the vacuum state, then the oxygen free nitrogen is emitted to the atmosphere, and in the end, vacuum the system. Repeat this process until all refrigerants in the system is cleared. After the final charging of the anaerobic nitrogen, discharge the gas into the atmosphere pressure, and then the system can be welded. This operation is necessary for welding the pipeline.

## Procedures of Charging Refrigerants

As a supplement to the general procedure, the following requirements need to be added:

- Make sure that there is no contamination among different refrigerants when using a refrigerant charging device. The pipeline for charging refrigerants should be as short as possible to reduce the residual of refrigerants in it.
- Storage tanks should remain vertically up.
- Make sure the grounding solutions are already taken before the refrigeration system is charged with refrigerants.
- After finishing the charging (or when it is not yet finished), label the mark on the system.
- Be careful not to overcharge refrigerants.

## Scrap and Recovery

### Scrap:

Before this procedure, the technical personnel shall be thoroughly familiar with the equipment and all its features, and make a recommended practice for refrigerant safe recovery. For recycling the refrigerant, shall analyze the refrigerant and oil samples before operation. Ensure the required power before the test.

1. Be familiar with the equipment and operation.
  2. Disconnect power supply.
  3. Before carrying out this process, you have to make sure:
    - If necessary, mechanical equipment operation should facilitate the operation of the refrigerant tank.
    - All personal protective equipment is effective and can be used correctly.
    - The whole recovery process should be carried out under the guidance of qualified personnel.
    - The recovering of equipment and storage tank should comply with the relevant national standards.
  4. If possible, the refrigerating system should be vacuumized.
  5. If the vacuum state can't be reached, you should extract the refrigerant in each part of the system from many places.
  6. Before the start of the recovery, you should ensure that the capacity of the storage tank is sufficient.
  7. Start and operate the recovery equipment according to the manufacturer's instructions.
  8. Don't fill the tank to its full capacity (the liquid injection volume does not exceed 80% of the tank volume).
  9. Even the duration is short, it must not exceed the maximum working pressure of the tank.
  10. After the completion of the tank filling and the end of the operation process, you should make sure that the tanks and equipment should be removed quickly and all closing valves in the equipment are closed.
  11. The recovered refrigerants are not allowed to be injected into another system before being purified and tested.
- Note: The identification should be made after the appliance is scrapped and refrigerants are evacuated. The identification should contain the date and endorsement. Make sure the identification on the appliance can reflect the flammable refrigerants contained in this appliance.

### Recovery:

1. The clearance of refrigerants in the system is required when repairing or scrapping the appliance.  
It is recommended to completely remove the refrigerant.
2. Only a special refrigerant tank can be used when loading the refrigerant into the storage tank.  
Make sure the capacity of the tank is appropriate to the refrigerant injection quantity in the entire system. All tanks intended to be used for the recovery of refrigerants should have a refrigerant identification (i.e refrigerant recovery tank).  
Storage tanks should be equipped with pressure relief valves and globe valves and they should be in a good condition.  
If possible, empty tanks should be evacuated and maintained at room temperature before use.
3. The recovery equipment should be kept in a good working condition and equipped with equipment operating instructions for easy access. The equipment should be suitable for the recovery of R290 refrigerants. Besides, there should be a qualified weighting apparatus which can be normally used. The hose should be linked with detachable connection joint of zero leakage rate and be kept in a good condition.  
Before using the recovery equipment, check if it is in a good condition and if it gets perfect maintenance. Check if all electrical components are sealed to prevent the leakage of the refrigerant and the fire caused by it.  
If you have any question, please consult the manufacturer.
4. The recovered refrigerant shall be loaded in the appropriate storage tanks, attached with a transporting instruction, and returned to the refrigerant manufacturer. Don't mix refrigerant in recovery equipment, especially a storage tank.
5. The space loading R290 refrigeration can't be enclosed in the process of transportation.  
Take anti electrostatic measures if necessary in transportation. In the process of transport, loading and unloading, necessary protective measures must be taken to protect the air conditioner to ensure that the air conditioner is not damaged.
6. When removing the compressor or clearing the compressor oil, make sure the compressor is pumped to an appropriate level to ensure that there is no residual R290 refrigerants in the lubricating oil. The vacuum pumping should be carried out before the compressor is returned to the supplier. Only the electrical heating method for heating the compressor housing is allowed to speed up the process.  
Ensure the safety when discharging oil from the system.

## DE-COMMISSIONING, DISMANTLING & DISPOSAL

This product contains refrigerant under pressure, rotating parts, and electrical connections which may be a danger & cause injury. All work must only be carried out by competent persons using suitable protective clothing and safety precautions.



Read the Manual



Risk of Electric Shock

**RoHS**



Unit is Remotely controlled  
& may start without warning



1. Isolate all sources of electrical supply to the unit including any control system supplies switched by the unit. Ensure that all points of electrical and gas isolation are secured in the OFF position. The supply cables and gas pipe work may then be disconnected and removed. For points of connection refer to unit installation instructions.
2. Remove all refrigerant from each system of the unit into a suitable container using a refrigerant reclaim or recovery unit. This refrigerant may then be reused, if appropriate, or returned to the manufacturer for disposal. Under NO circumstances should refrigerant be vented to atmosphere. Where appropriate, drain the refrigerant oil from each system into a suitable container and dispose of according to local laws and regulations governing disposal of oily wastes.
3. Packaged units can generally be removed in one piece after disconnection as above. Any fixing down bolts should be removed and then unit lifted from position using the points provided and equipment of adequate lifting capacity. Reference MUST be made to the unit installation instructions for unit weight and correct methods of lifting. Note that any residual or spilt refrigerant oil should be mopped up and disposed of as described above.
4. After removal from position the unit parts may be disposed of according to local laws and regulations.
5. Meaning of crossed Out wheeled dustbin: Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.